

Service guide

 
CO₂ solenoid valve

Type EVT

032R9610

032R9610

NC copper connections




NC steel connections




Disassembly and assembly


Coil mounting and removal

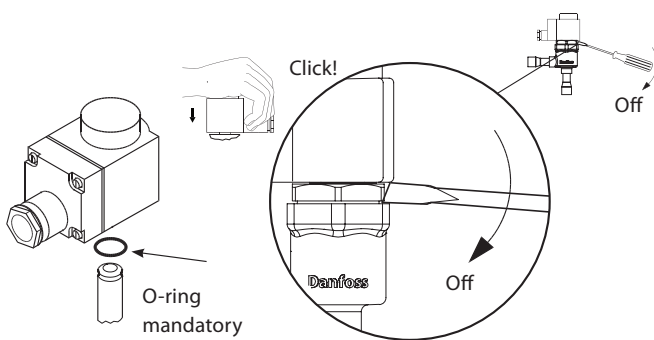


Mounting / dismounting of top part

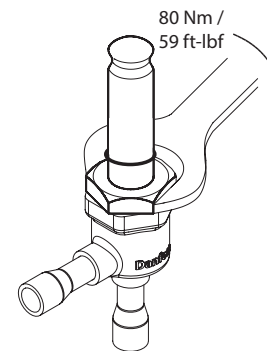

Disassembly of EVT 1.2

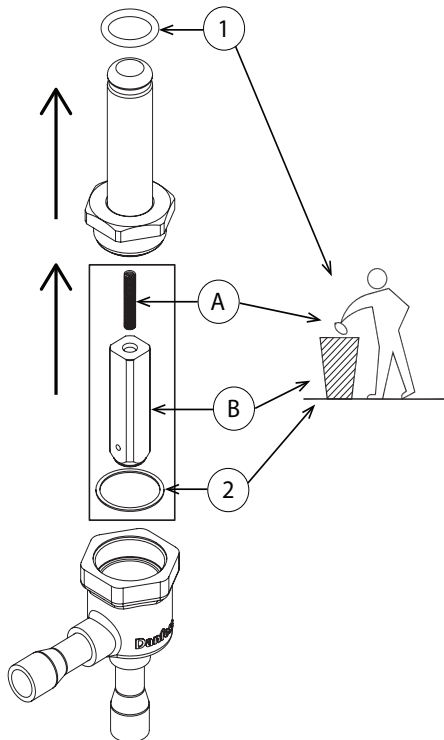

Disassembly of EVT 2-3

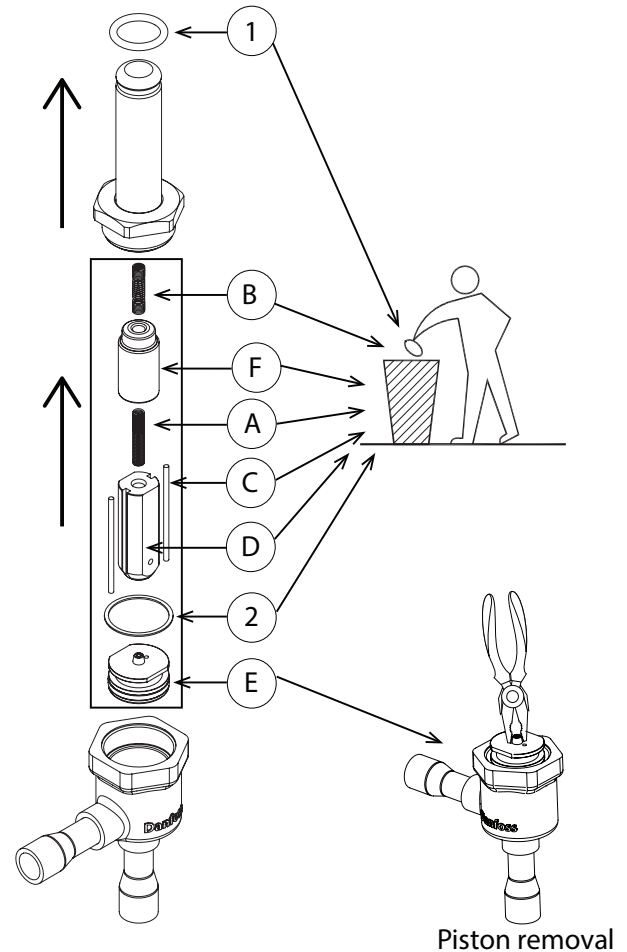

Piston removal

