

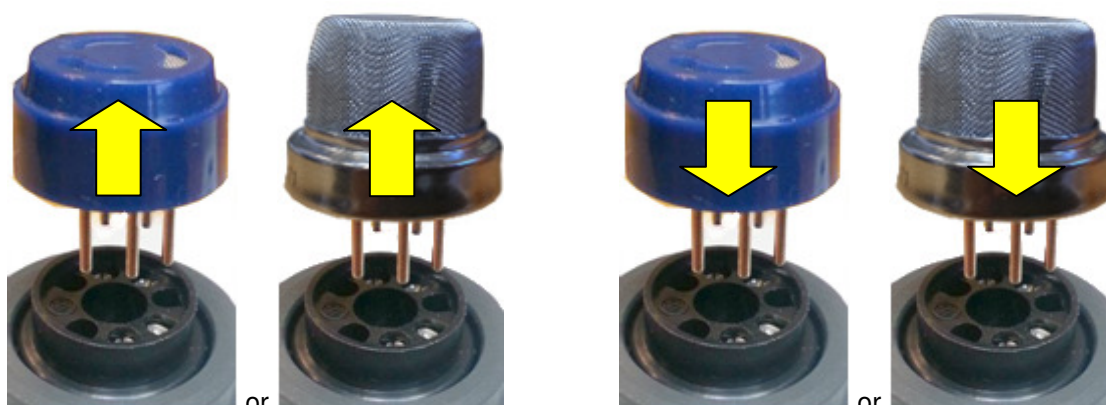


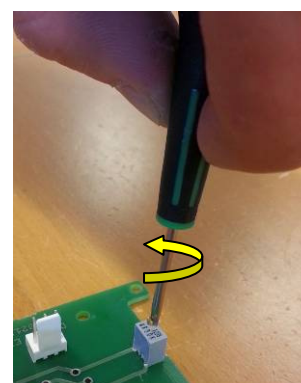

1)	2)
Un-plug old sensor.	Plug-in new sensor.

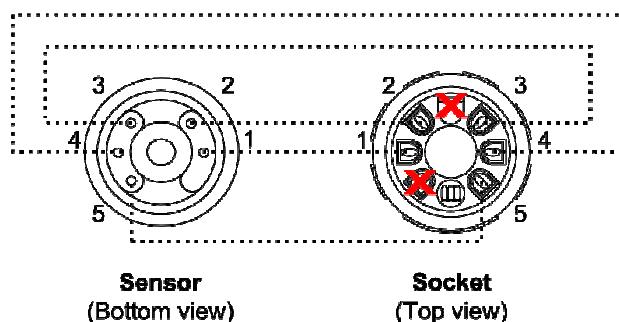

3)	4)
Note! Align pins in socket. Important!	Adjust sensor offset (GV-offset) according respective sensor type and value. Follow instruction a) or b). a) Set offset according the DT300 reference sensor. See DT300 manual b) Set offset value to 'Nominal offset' according instruction for respective SEN.... sensor. See separate manual. Note! Must only be made in 100% clean air! Important!