## **Packaged Air Conditioner Optional Parts Drain lift up mechanism Installation Manual**

Type: PAC-SJ92DM-E PAC-SJ93DM-E PAC-SJ94DM-E

Before installation, read this manual and the installation manual of the indoor unit carefully.

**Safety Precautions** 

 Be sure to read these safety precautions thoroughly to ensure correct installation. • The precautions described here are important for your safety and must be followed.

. The following two symbols are used to denote dangers that may be caused by incorrect installation. They are classified according to the degree of danger. MARNING This symbol denotes what could lead to serious injury or death if you install the mechanism incorrectly.

CAUTION This symbol denotes what could lead to personal injury or damage to your property if you install the mechanism incorrectly.

After the installation has been completed, carry out a test run and check that there are no abnormalities. At the same time explain

the safety precautions, method of operation and maintenance to your customers, and hand this manual over to them The customer id requested to keep this manual together with the user's manual in a safe place. If another user is going to use this

Ask your dealer or technical representative to Any deficiency caused by your own installation ma

result in water leakage, an electric shock or fire

Ensure that installation work is done correctly following this installation manual. Any deficiency caused by installation may result in water leakage, an electric shock or fire

**<b> ⚠** CAUTION

Make sure that the refrigerant pipes are insulated in order to prevent ncomplete insulation may cause condensation on the surface of pipes

vetting of the ceiling, floor and other important properties.

Make sure that the drainage pipes are carried out correctly following this manual and that it is insulated in order to prevent condensation Any deficiency caused by piping may result in water leakage, wetting of the ceiling, floor and other personal properties.

## unit, make sure that the manuals are handed over to him. Confirming Supplied Accessories

· Before starting installation, make sure that the following accessories are present

① Drain lift up mechanism ② Attachment ③	3 Screws (4×10) 4 VP-20 pipe	⑤ Pipe cover	Flexible hose	⑦ Fastener	® L-shaped pipe (gas pipe)	L-shaped pipe (liquid pipe)	10 Insulator A	1 Insulator B
mechanism ① fixture o	For the installation of drain lift up nechanism ① ×6 ×1	For insulation of VP20 pipe ④ ×1	<b>O</b>	×1	*1	PAC-SJ92/93 ×1 PAC-SJ94 ×2	For the insulation of L-shaped pipes ® and ® and the	3t×250×120 (For external insulation)  For the insulation of L-shaped pipes @ and @ and the refrigerant pipes. ×2


## Installation Diagram of the Drain lift up mechanism

- This drain lift up mechanism must be installed inside an indoor unit
- · Installing this drain lift up mechanism limits to arrange the refrigerant pipe only upward
- To facilitate installation of the drain lift up mechanism, it should be installed before indoor unit. • The size of the plumbing that must connect, by the refrigerant kind of the indoor unit that corresponds in the case of PAC-SJ94DM-E, changes
- Please refer to the installation manual of an indoor unit for details.
- · Accessory pipes (® or ®) are compatible with any types of refrigerant pipe. The connecting pipe of the
- L-shaped pipe (liquid pipe) included with PAC-SJ94 will differ depending on the indoor unit model in use 1 In case of accessory parts VP-20pipe ④ and pipe cover ⑤ do not have enough length because the lifting height is high, please supply locally

	Drainage outlet
Viewed from the Top  Drain lift up mechanism ①	(for VP-20)
Attachment ②	2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2 2
Liquid pipe	Gas pipe  Right side panel
Knockout hole on the indoor unit (for upper piping)	Flexible hose ®
	<table 1=""></table>

		Table 12		
Gas pipe Liquid Pipe		Drain lift up mechanism Model		
φ12.7	<i>ϕ</i> 6.35	PAC-SJ92		
$\phi$ 15.88	φ9.52	PAC-SJ93		
ø15.88	φ6.35/φ9.52	PAC-SJ94		


#### Viewed from the Front Viewed from the Right L-shaped pipe ® /(gas pipe) L-shaped pipe <sup>9</sup> (liquid pipe) VP-20pipe @ \*1 (pipe cover ⑤) L-shaped pipe ®, 9 (gas pipe, liquid pipe) Drain lift up mechanism Drain lift up mechanism Fixing screw @ Attachment @ 126 40 27 Drain connecting hole on Drain connecting hole Flexible hose @

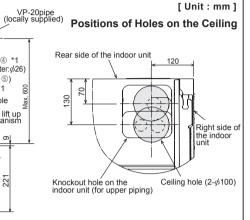

## 3 Installing the Drain lift up mechanism

- · Connect the flexible hose to the drain lift up mechanism before installing the mechanism to an
- 1. Remove the intake grille and side panel. (Refer to the indoor unit installation manual.)
- 2. Prepare the knockout hole to be used for the upper piping of the indoor unit. 3. Fix the attachment ② with the fixing screws ③ (×2)
- 4.Apply vinyl chloride type adhesive to the drain connecting hole of the drain lift up mechanism and insert the flexible hose @ firmly into the hole.
- 5. Apply vinyl chloride type adhesive to the drain connection hole of the indoor unit, and install the drain lift up mechanism (1) while inserting the flexible hose (6). Do not twist during insertion. 6.Fix the drain lift up mechanism ① with the fixing screws ③ (×4)

Do not press the rear side panel (metal plate) as deformation will result

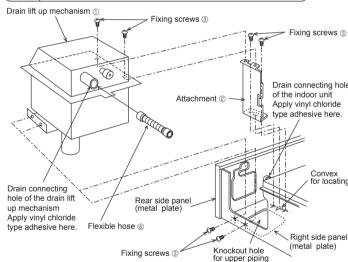


### 5 Drain Piping

\*2 In case of accessory parts VP-20pipe @ and pipe cover ⑤ do not have enough length because the lifting height is high please supply locally

#### For details on piping, refer to the installation manual of the indoor unit.

- Apply vinyl chloride type adhesive to the drainage outlet of the drain lift up mechanism  $\oplus$ , then insert the VP-20 pipe  $\oplus$  into it. (30mm deep)
- 2.Connect the VP20 pipe @ and existing drain pipe using a 90-degree elbow etc. and adhesive 3.Cover the VP-20 pipe @ with the pipe cover ©
- Insulate all pipes, from the drain lift up mechanism up to the outside

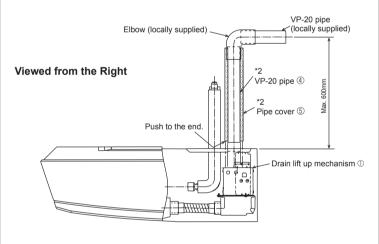

## [Make sure to follow the following points during drain piping.]

- Drain lifting height must be less than 600mm.
- Incline the drain pipe downwards (1/100 or more) to the drainage side (outdoor)
- Do not create traps or peaks.
- Keep the horizontal piping within 20m. Use fixtures to prevent the pipe from waving. Do not install air vent pipes. The drainage may spout out.
- Use general-purpose hard vinyl chloride pipes (outer diameter:  $\phi$ 26) and apply vinyl chloride type adhesive to prevent any leakage.
- Cover with insulator (made of foamed polyethylene, with specific gravity of 0.03 thickness of 9mm or more)
- Do not install odor trap at the drain outlet.
- Locate the end of pipe at a point where odor is unlikely to occur.


  Do not insert the pipe directly into a drainage ditch where sulfur gas may be produced. Use VP-30 pipes for centralized piping. Install the centralized drain pipe approximately
- 10cm below the output of pipes connected from the drain lift up mechanism

# 1.5~2m Downward inclination (1/100 or more) Make the drop as long as possible (approx. 10cm) رب [Example of centralized piping] (1/100 or more)


## **Electric Wiring**

Refer to the installation manual of the indoor unit together with this manual

- Perform the work after checking that the power supply is off.
- .Remove the beam
- Remove the electric parts cover. 3.Pull the electric parts box downwards
- A Connect the lead wire of drain lift up mechanism to the CNP and CN4F connectors provided on the control P.C. board of the indoor unit.
- .Tie up the lead wires with the fastener ② so that the wires do not come apart inside
- the electric parts box. 6.When the wiring is finished, re-install the electric parts box, its cover and the beam

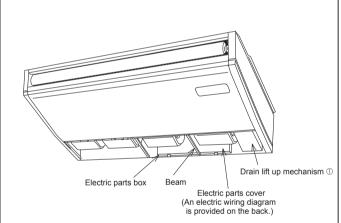

Lead wire of the drain lift up mechanism

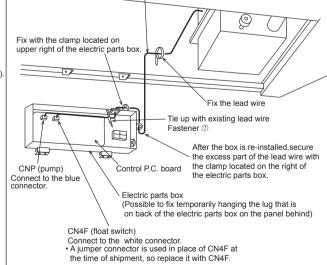

The positions of the connectors which must be connected to the control P.C. board in certain models differ from those specified in the above diagram. Make sure that the lead wire are connected to CNP and CN4F connectors.

# Test Run

/Indoor unit

L-shaped pipes ®, 9 (gas pipe, liquid pipe) Through this test run, check that drainage is discharged properly and that there is no water leakage from any of the connections. Refer to the installation manual of the indoor unit together

1. Supplying water

Wrap this part with the insulator

that comes with the indoor unit

Supply approximately 1000cc of water to the air outlet.

**Refrigerant Piping** 

[With the stop valve of the outdoor unit fully closed]

2.Remove the flare nut and cap from the indoor unit.

7.Cover each connection with heat insulator ...

9. Fully open the stop valves (both liquid and gas).

Apply the ester-oil or

(locally supplied)

ether-oil or alkylbenzene

[After the refrigerant circuit is complete]

• For details on piping, refer to the installation manual of the indoor unit.

3. Apply lubricant to the flare sheet connecting section of the indoor unit

4.Connect the L-shaped pipes (gas pipe, liquid pipes) ® and ® quickly. 5. Fit the removed flare nut to the existing pipes and carry out flaring.

6.Connect the L-shaped pipes with the existing pipes in the same way.

8.Vacuumize the refrigerant lines through the service port of the liquid stop valve

• The method for operating the stop valve is described on the outdoor unit installation manual.

1. Apply lubricant to the flare sheet of the L-shaped pipes (gas pipe, liquid pipe) (as pipe, liquid pipe)



Refrigerant pipes (locally supplied)

the indoor unit.

Cover this part with insulator

A ® and then cover it over

Insulator A,B ®,®

with insulator B ①

been removed from

Use the flare nut which has

- 2. Carrying out a test run
- (1) Turn the power ON.
  (2) Press the TEST RUN button on the remote controller twice.
- (3) Press the MODE button to select cooling mode.

   The drain lift up mechanism will be activated to start discharging the water
- (4) Check whether water is discharged properly. (5) Press the POWER ON/OFF button to cancel the test run.

3.Re-install each part after checking

If the drain lift up mechanism is installed at the time of the year when heating is used, make sure that the water for the drain check

After removal of the water, reinstall the drainage plug.

