



CONFIDENTIAL

Room Air Conditioner **SVC MANUAL(Exploded View)**

MODEL : S3-W24K23BA [S24EQ.SSK]

CAUTION

Before Servicing the unit, read the safety precautions in General SVC manual.
Only for authorized service personnel.

1. Specification

Buyer Model Factory Model	Set (Indoor / Outdoor)		Unit	S24EQ.SSK (S24EQ.NSK / S24EQ.U24) S3-W24K23BA (S3NW24K23BA / S3UW24K23BA)		
Capacity	Cooling	Min ~ Rated ~ Max	kW	0.90	6.60	7.42
			Btu/h	3,071	22,520	25,318
	Heating	Min ~ Rated ~ Max	kW	0.90	7.50	8.64
			Btu/h	3,071	25,591	29,481
Power Input	Heating -7 °C	Max	kW		6.00	
	Cooling	Min ~ Rated ~ Max	W	210	2,164	2,500
Running Current	Heating	Min ~ Rated ~ Max	W	210	2,238	2,750
	Cooling	Min ~ Rated ~ Max	A	1.2	9.80	14.0
EER	Heating	Min ~ Rated ~ Max	A	1.2	10.00	14.0
			W/W		3.05	
SEER			(Btu/h)/W		10.41	
COP			-		6.90	
SCOP			W/W		3.35	
P design C / P design H			(Btu/h)/W		11.43	
Energy Label Grade			-		4.30	
Annual Energy Consumption	Cooling / Heating		kW		6.6 / 5.0	
Power Supply	Cooling / Heating		kWh/year		A++ / A+	
Available Voltage Range			Ø, V, Hz		335 / 1628	
Power Factor			V		1,220-240, 50	
Moisture Removal	Cooling / Heating		%		187 ~ 276	
Indoor	Air Flow Rate	Cooling, Max / H / M / L	l/h		97 / 97	
		Heating, Max / H / M / L	m³/min		2.50	
	Sound Pressure Level	Cooling, Max / H / M / L / SL	m³/min		18.3/16.1/13.1/10.5	
		Heating, Max / H / M / L	dB(A)		19.8/17.6/14.3/11.0	
	Sound Power Level		dB(A)		49/47/42/34/31	
	Dimensions (W x H x D)	Net	dB(A)		50/47/42/34	
		Shipping	mm		65	
	Weight	Net	mm		998 x 345 x 210	
Outdoor	Exterior Color Code	Shipping	kg		1,053 x 424 x 278	
	Air Flow Rate	Max	kg		12.7	
			kg		16.0	
	Sound Pressure Level	Cooling, Rated	-		Munsell 7.5PB 10/2 (RAL 9016)	
		Heating, Rated	m³/min		49.0	
	Sound Power Level		dB(A)		54	
	Dimensions (W x H x D)	Net	dB(A)		57	
		Shipping	mm		70	
Compressor	Weight	Net	mm		870 x 650 x 330	
	Max. Fuse Size	Shipping	mm		1,026 x 683 x 446	
	Exterior Color Code	Net	kg		46.0	
	Operation Range	Shipping	kg		50.0	
	Type	Cooling	A		20	
	Model	Heating	°C DB		Munsell 9.54Y 8.34/1.31 (RAL 9001)	
	Motor Type	Heating	°C DB		-15 ~ 48	
	Oil Type / Maker		°C WB		-10 ~ 24	
Fan(Indoor)	Oil Charge		-		-10 ~ 18	
	O.L.P. Name		-		Twin Rotary	
	Manufacturer / Country of Origin		-		DKT176MAJ	
	Type		-		BLDC	
Fan(Outdoor)	Motor Output		W		PVE (FW68D) / IDEMITSU	
	Motor Type		-		470	
	Motor Output		W		-	
	Motor Insulation		-		LG Electronics / China	
Heat Exchanger	Motor Enclosure / Ingress Protection		-		Cross Flow Fan	
	Material, Tube / Fin		-		Propeller Fan	
	(Ø x Row x Column x FPI x L) x Qty.	#1	-		BLDC	
	(Ø x Row x Column x FPI x L) x Qty.	#2	-		85	
	(Ø x Row x Column x FPI x L) x Qty.	#3	-		Class E	
	(Ø x Row x Column x FPI x L) x Qty.	#4	-		TEAO / IPX4	
	Corrosion Protection		-		Cu / Al	
	Fin Type		-		(Ø 7 x 2 x 16 x 20 x 744) x 1	
	Material, Tube / Fin		-		-	
	(Ø x Row x Column x FPI x L) x Qty.	#1	-		PCM	
	(Ø x Row x Column x FPI x L) x Qty.	#2	-		Silt	
	Corrosion Protection		-		Cu / Al	
Circuit Breaker	Fin Type		-		(Ø 7 x 2 x 28 x 18 x 938) x 1	
	Power Supply Cable		A		Gold	
	Power Supply to Unit		No. x mm²		Corrugate	
	Power and Communication Cable		-		25	
Piping	Size	Liquid	mm		3 x 2.5	
	Connections Method	Gas	mm		Outdoor	
Drain Hose Size		Indoor / Outdoor	-		4 x 1.0	
Between Indoor & Outdoor	Piping Length	Min / Standard / Max	mm		Ø 6.35	
	Max. Elevation Difference	No Charge	m		Ø 15.88	
	Piping Connection Heat Insulation		-		Flared / Flared	
			-		21.5, 16.0	
Refrigerant	Type		-		3 / 7.5 / 30	
	Pre Charge		g		7.5	
	Additional Charge		g/m		15	
	Control		-		Both liquid and gas pipes	
Defrost Method	Global Warning Potential		-		R32	
	t-CO ₂ eq		-		1,100	
			-		20	
			-		Electronic Expansion Valve	
Tool Code (Chassis)	Indoor / Outdoor		-		675	
			-		0.743	
			-		Reverse Cycle	
			-		SK / U24A	

Note

— : No Relation

- For Circuit Breaker Rating, please conform to local standards whenever necessary.
- Exterior color code is approximate value.
- Due to our policy of innovation some specifications may be changed without notifications.

Conversion Formula

$$\text{kW} = \text{Btu/h} \times 0.0002931$$

$$\text{CFM} = \text{CMM} \times 35.3$$

2. Function

Category	Function	S24EQ.SSK
		S3-W24K23BA
Air Flow	Air Supply Outlet	1
	Airflow Direction Control (Left & Right)	5 Steps
	Airflow Direction Control (Up & Down)	6 Steps
	Auto Swing (Left & Right)	O
	Auto Swing (Up & Down)	O
	Fan Speed Steps (Fan / Cool / Heat)	6 / 6 / 6
	Natural Wind (Auto Wind)	O
	Jet Cool / Jet Heat (Power Wind)	O / O
	Comfort Air	O
Air Purifying	Prefilter (Washable / Anti-Bacteria)	O
	Deodorizing Filter (Triple)	X
	3M Micro Dust Filter	X
	3M Multi Protection Filter	X
	Plasma Air Purifier	X
Installation	Drain Pump	X
Reliability	Hot Start	O
	Self Diagnosis	O
	De-ice Control (Defrost)	O
	Dry Operation	O
Convenience	Auto Change over ³	O
	Auto Operation (Artificial Intelligence)	X
	Auto Cleaning (Coil Dry)	O
	Auto Restart Operation	O
	Child Lock ¹	O
	Forced Operation	O
	Group Control ¹	X
	Sleep Mode	7hr
	Timer 24hr (On/Off)	O
	Timer (Weekly) ¹	O
	Two Thermistor Control ¹	O
	Low Ambient Operation	O
	Overheating Protection	O
	Low Heating	X
	Voice Control	X
	Smart Scan (PIR)	X
	LG AC Tag On (NFC)	X
	Outdoor Silent Mode ³	O
	Mosquito Away	X
	Smart Diagnosis ³	O
	Indoor Unit Display Type	Number Display
	Indoor Unit Display Light	On/Off
Energy Saving	Energy Display ³	O
	Energy Saving	X
	Active Energy Control (Watt Option) ³	O
Individual Control	Wired Remote Controller (Premium) ²	X
	Wired Remote Controller (Standard) ²	PQRCVSL0(QW)
	Wired Remote Controller (Simple with Mode Selection) ²	X
	Wired Remote Controller (Simple without Mode Selection) ²	X
	Handheld Wireless Controller	AKB74955603
	(See Remote Controller Section) Setting Temperature Range (Cooling) Setting Temperature Range (Heating)	18~30 °C 16~30 °C
CAC Network Function	General Central Controller (Non LGAP)	X
	Network Solution (LGAP) ⁴	O
	Dry Contact ²	PDRYCB000 , PDRYCB100 , PDRYCB400
	PDI (Power Distribution Indicator) ²	X
	Outdoor Unit PI 485 ²	O
Special Function Kit	Wi-Fi	X
	Water Level Sensor Connection ²	X
	Wind Baffle Kit ²	X
	Sump Heater	X
	Sheath Heater	X
	Smart Invert Monitoring System (SIMs) ³	PSWMOZ3
Others	Mode Lock ³	Heating Only
	Temperature Control	Thermistor
	DRED (Demand Response Enabling Device)	X

Note

O : Applied, X : Not available

• Filters are optional in some specific areas.

• ¹ : This function can be operated only when the wired remote controller is connected. The applicability of each function depends on the above table.


• ² : Optional accessories must be purchased separately.

• ³ : When connected to the Multi Outdoor unit, the function may not be supported.

• ⁴ : When connected to the Multi Outdoor unit, the function may be supported according Multi Outdoor unit.

3. Refrigerant Cycle Diagram

Model : S24EQ (S3-W24K23BA)

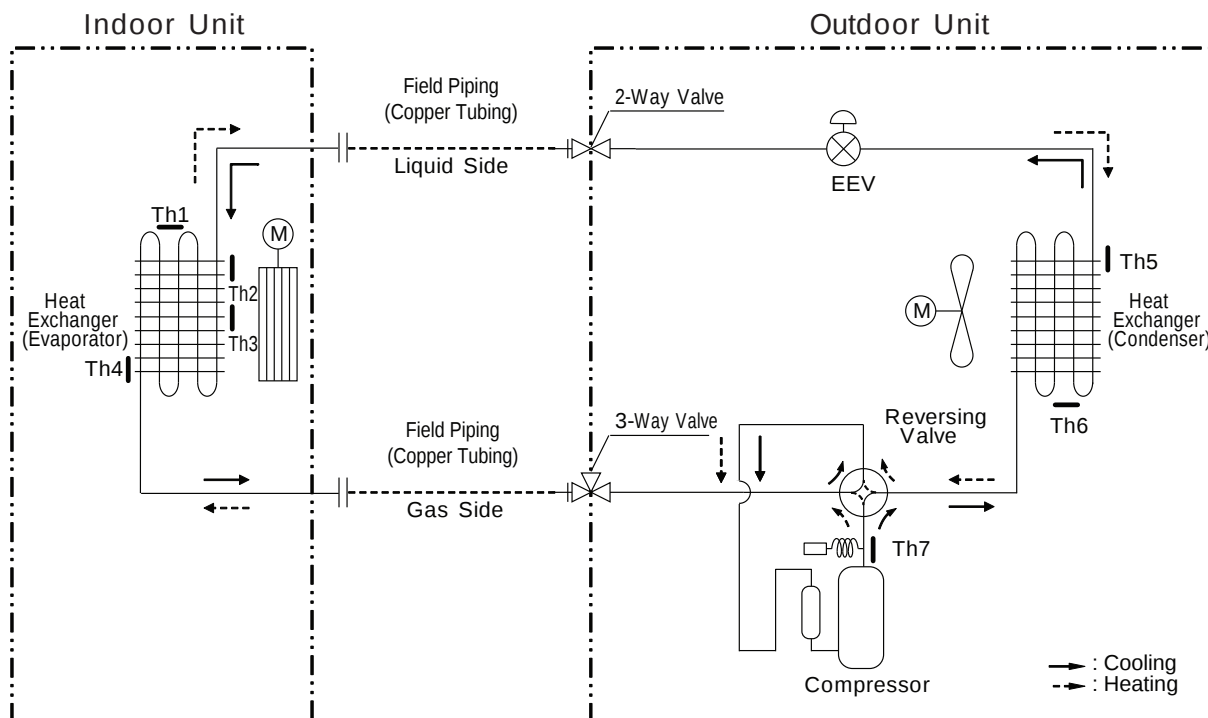

LOC.	Description	PCB Connector
Th1	Thermistor for indoor air temperature	CN-TH1 (Indoor)
Th2	Thermistor for evaporator inlet temperature	
Th3	Thermistor for evaporator middle temperature	CN-TH3 (Indoor)
Th4	Thermistor for evaporator outlet temperature	CN-TH2 (Indoor)
Th5	Thermistor for outdoor air temperature	CN_AIR_YL
Th6	Thermistor for condensing temperature	CN_C_PIPE_VI_BR
Th7	Thermistor for discharge pipe temperature	CN_DISCHARGE_BK



■ Refrigerant Pipe Connection Port Diameters

Model		Gas		Liquid	
		mm	inch	mm	inch
S24EQ	Multi Model	Ø 12.7	Ø 1/2	Ø 6.35	Ø 1/4
	Single Split Model	Ø 15.88	Ø 5/8	Ø 6.35	Ø 1/4



Appendix	Heat Exchanger	Propeller Fan	Cross Flow Fan	Compressor	Accumulator	4 Way Valve
	EEV (Electronic Expansion Valve)	Capillary Tube	2-Way Valve 3-Way Valve	Temperature Sensor	Pressure Sensor	Pressure Switch
	Check Valve	Flare Joint	Muffler	Strainer		

4. Wiring Diagrams

Indoor Unit

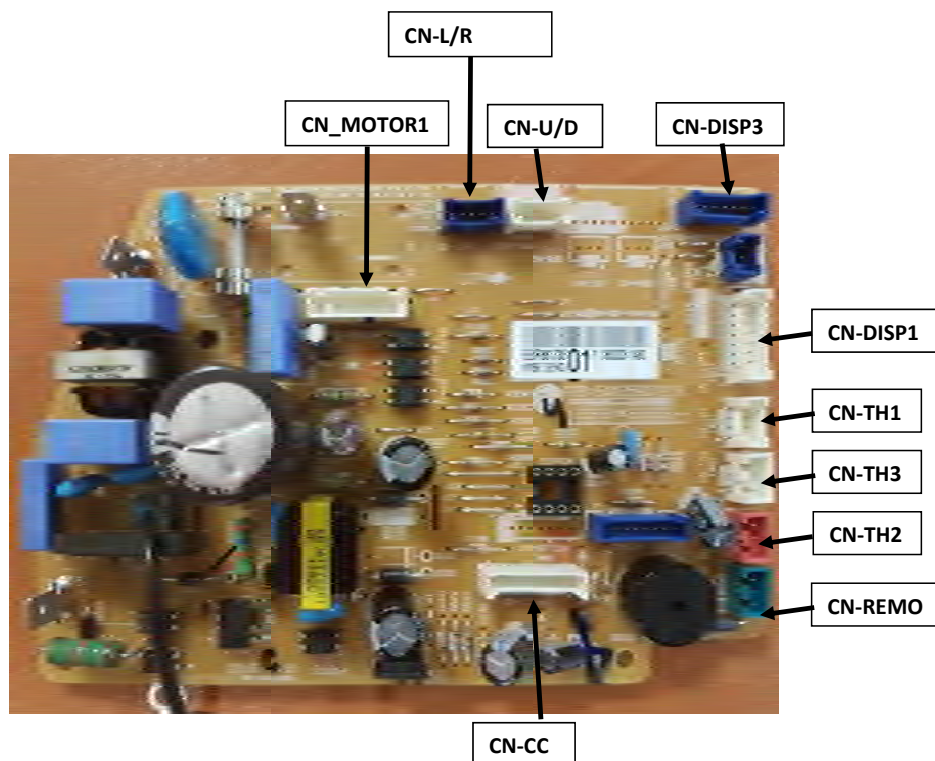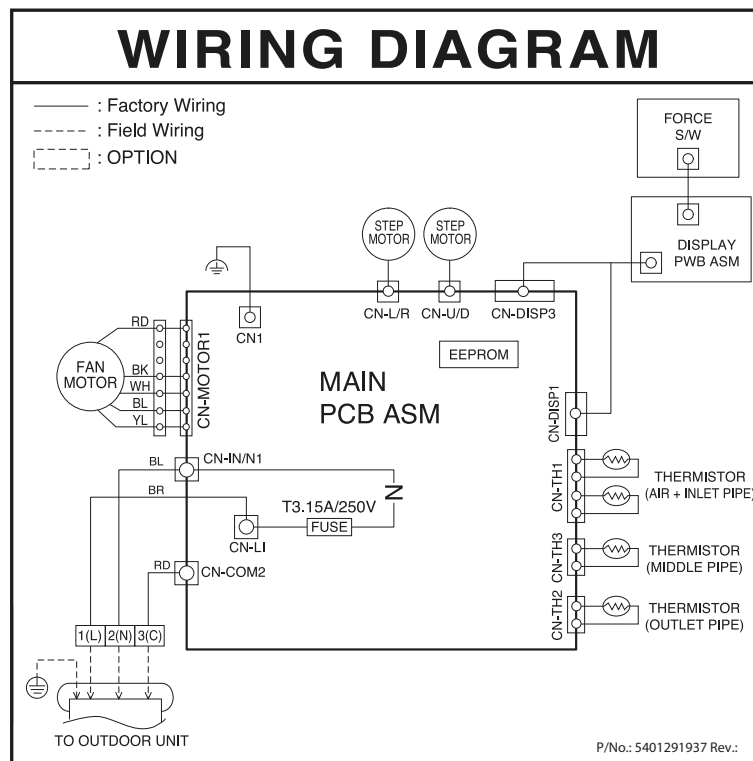


Outdoor Unit

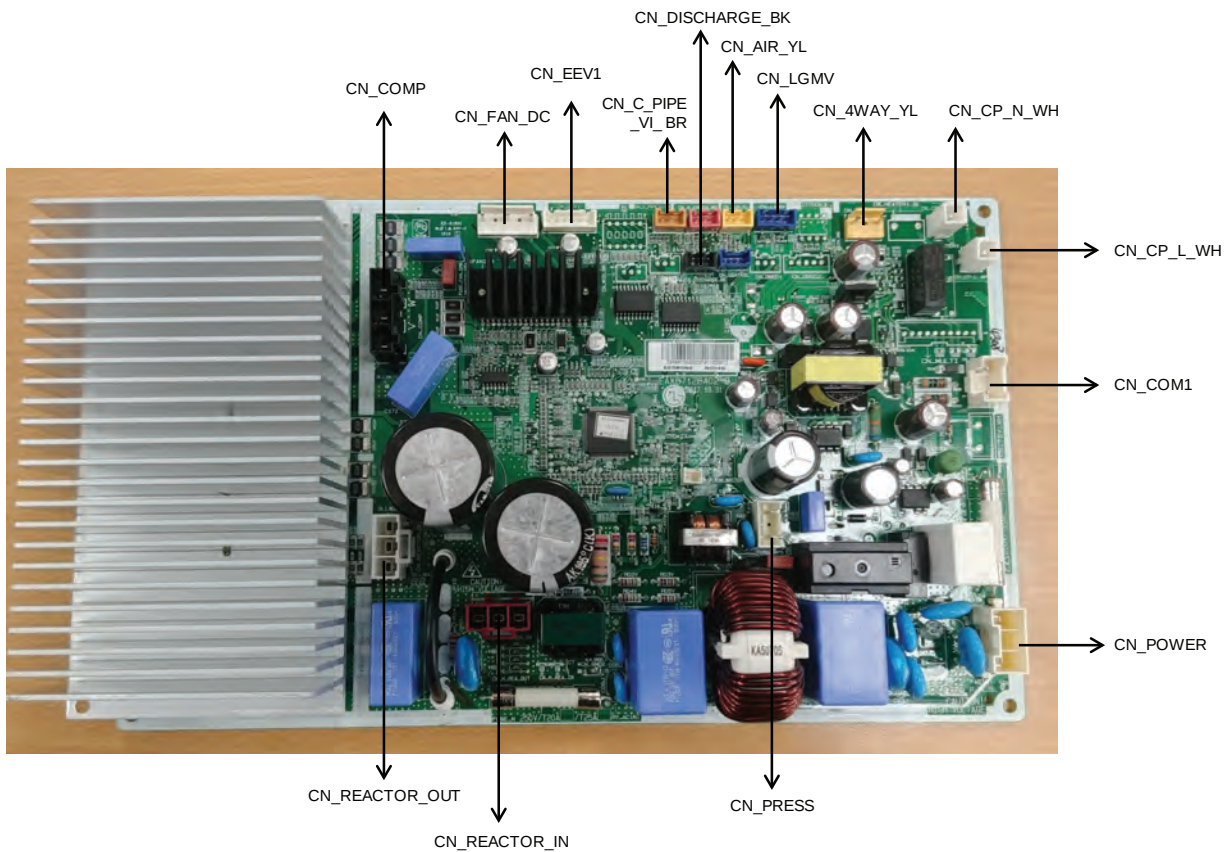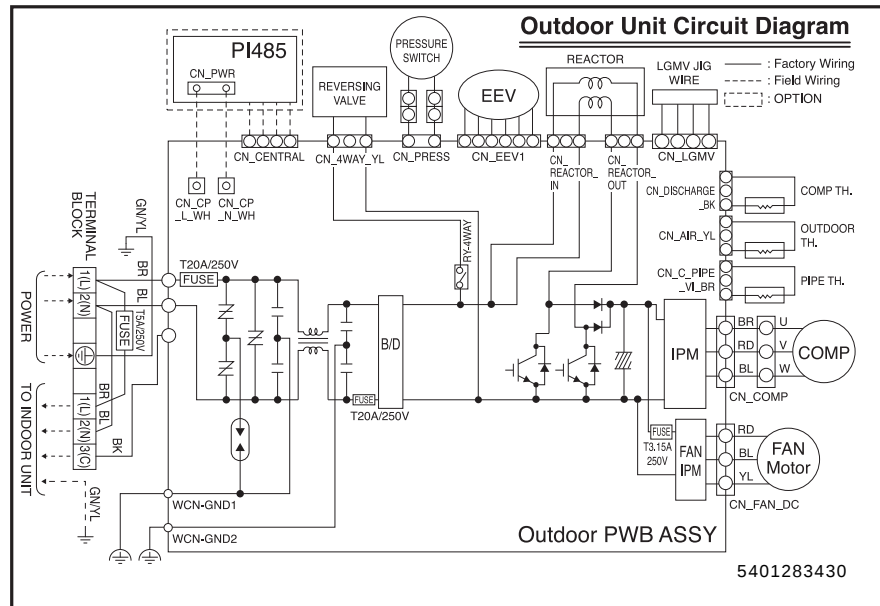


5. Exploded View

Indoor Unit

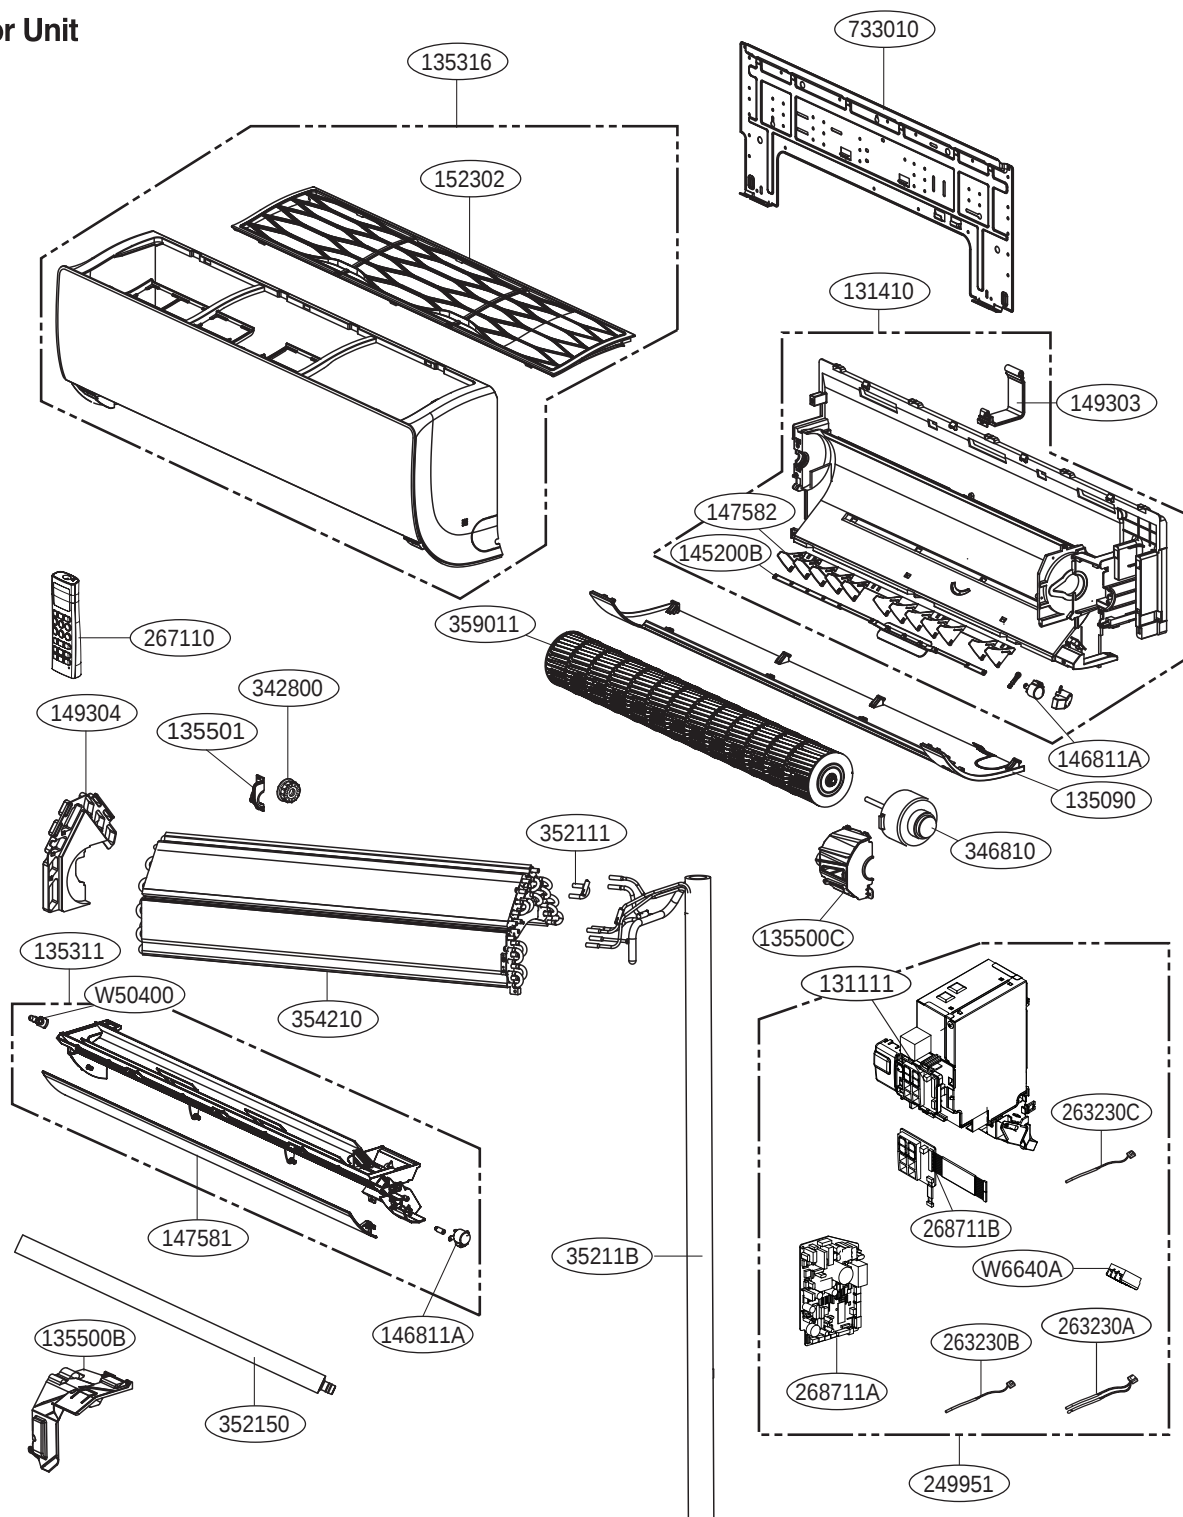

LOC.	Description	PCB Connector
263230A	Thermistor for indoor air temperature	CN-TH1 (INDOOR)
	Thermistor for evaporator inlet temperature	CN-TH1 (INDOOR)
263230B	Thermistor for evaporator middle temperature	CN-TH3 (INDOOR)
263230C	Thermistor for evaporator outlet temperature	CN-TH2 (INDOOR)


Outdoor Unit

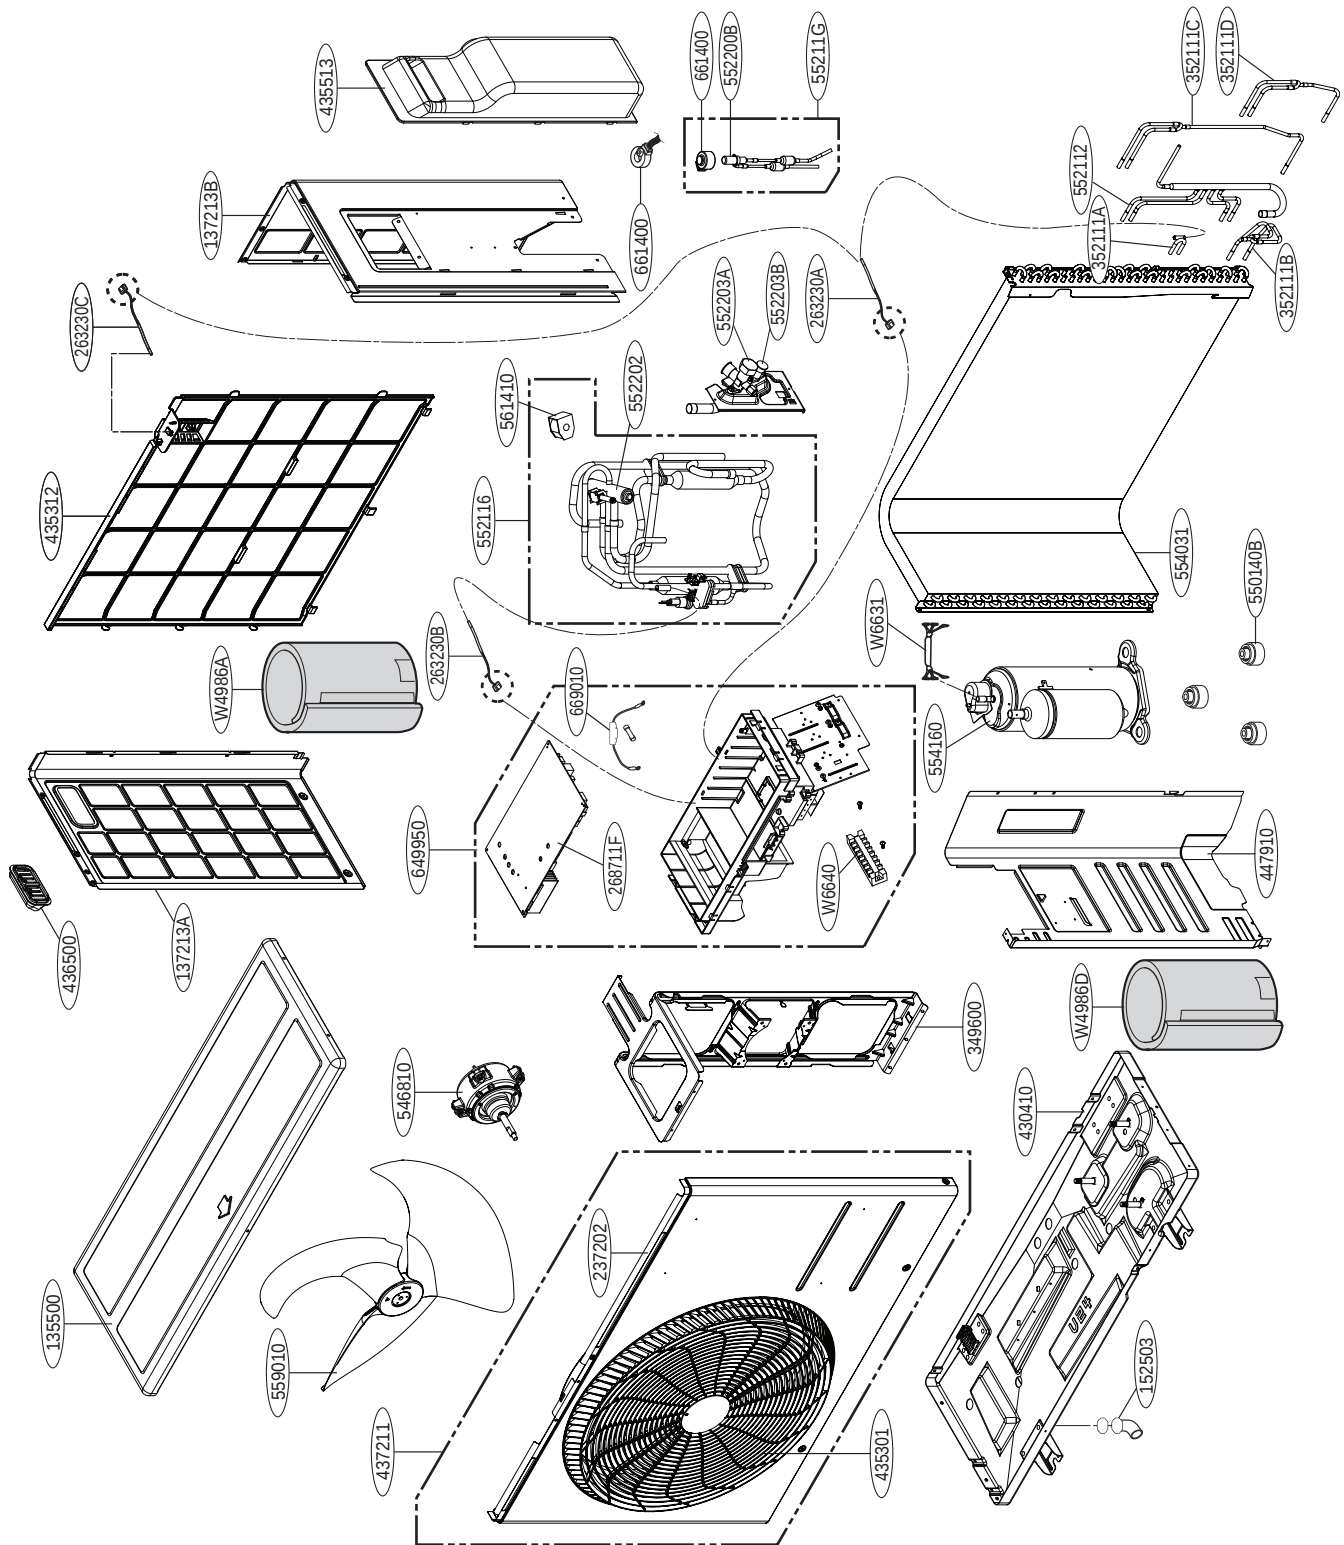

LOC.	Description	PCB Connector
263230A	Thermistor for condensing temperature	CN_C_PIPE_VI_BR
263230C	Thermistor for outdoor air temperature	CN_AIR_YL
263230B	Thermistor for discharge pipe temperature	CN_DISCHARGE_BK


6. SVC Guide

■Guide 'How to disassemble the C/Box from the Chassis'

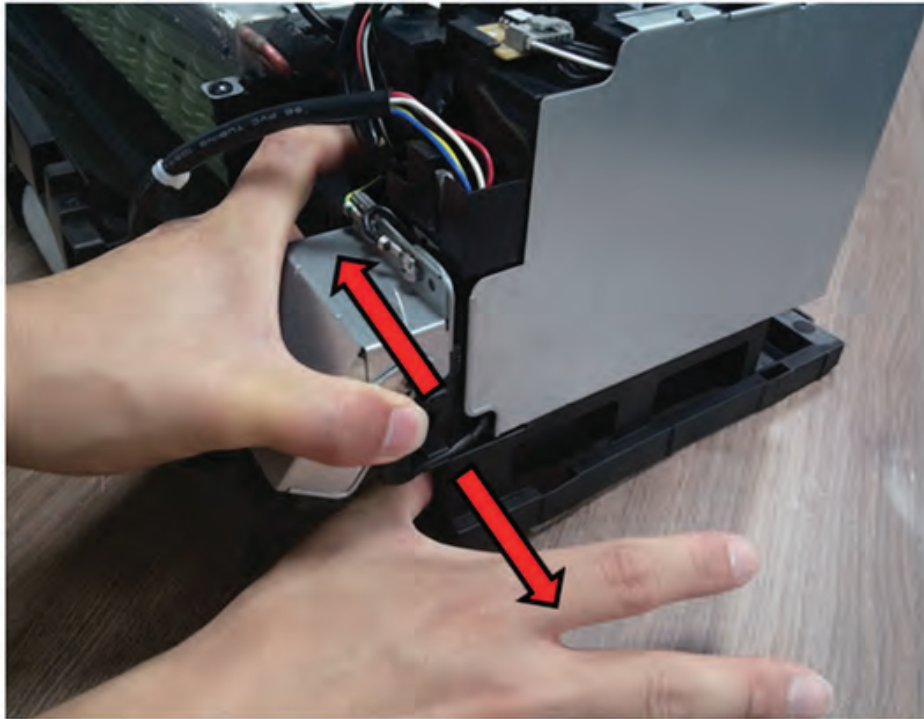


- Right Hand : Push the chassis(Refer to the picture)
- Left Hand : Push the C/Box(Refer to the picture)

■Guide 'How to disassemble the Cover(PD) from the C/Box'

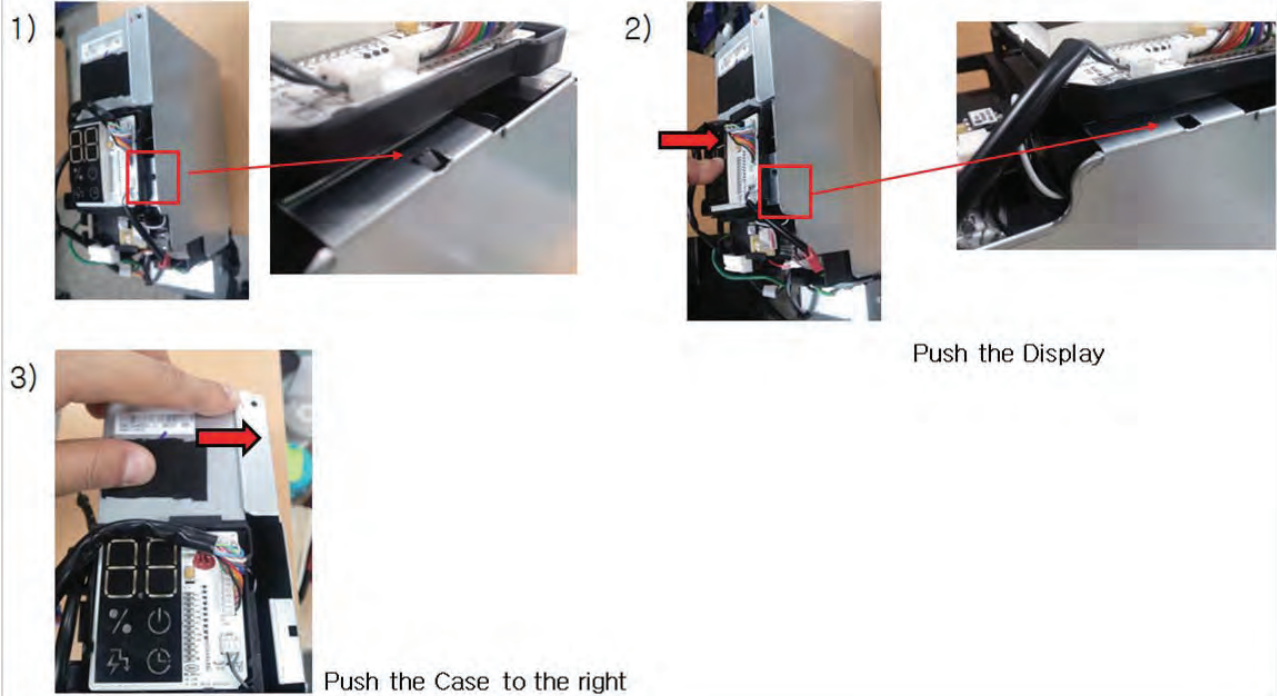

■Guide 'How to disassemble the PCBA from the C/Box'

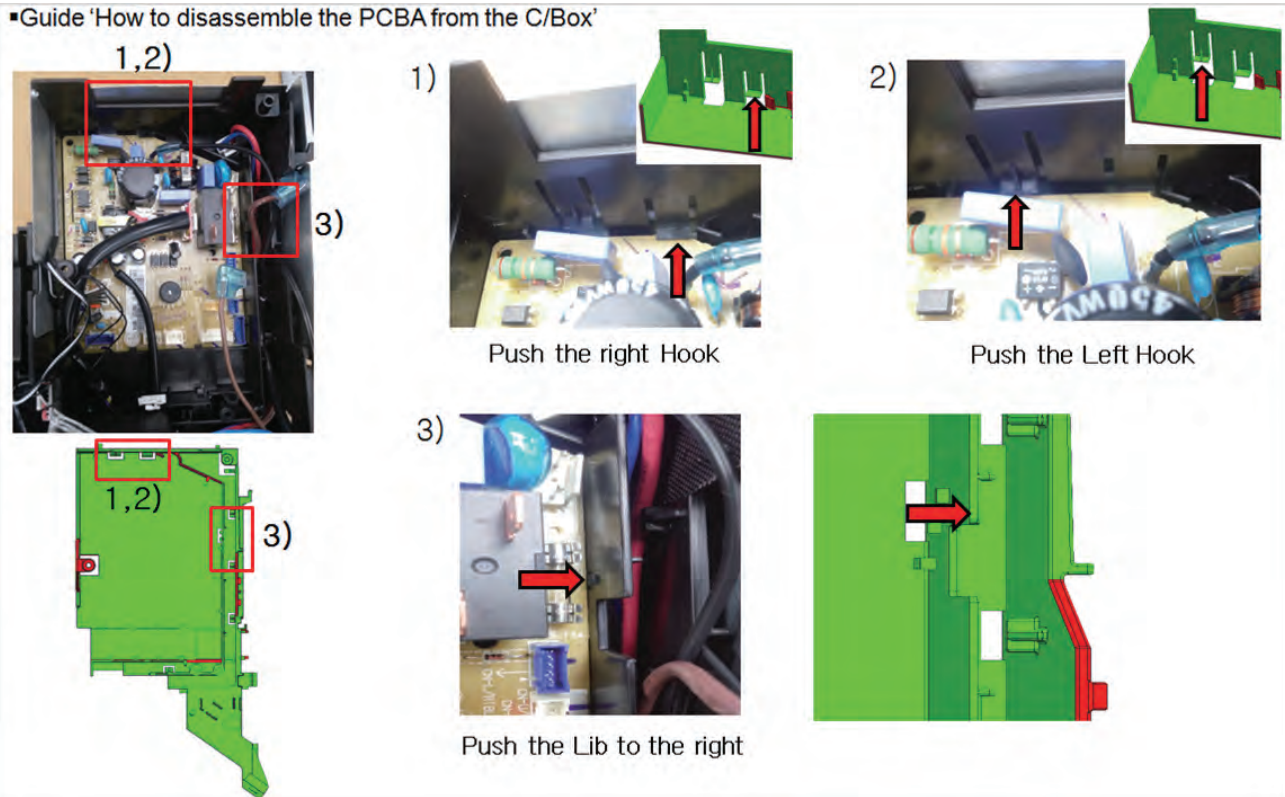



WARNING

- Do not use means to accelerate the defrosting process or to clean, other than those recommended by the manufacturer.
- The appliance shall be stored in a room without continuously operating ignition sources.(for example: open flames, an operating gas appliance or an operating electric heater)
- Do not pierce or burn.
- Be aware that refrigerants may not contain an odor.
- The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
- An unventilated area where the appliance using flammable refrigerants is installed shall be so constructed that should any refrigerant leak, it will not stagnated so as to create a fire or explosion hazard.
- Information of Maximum charge amount : 1,550 g (R32)
- If you want to know information of installation, Read Installation Manual.
- Keep any required ventilation openings clear of obstruction.
- The installation of pipe-work shall be kept to a minimum.
- Pipe-work shall be protected from physical damage.
- Compliance with national gas regulations shall be observed.
- Mechanical connections shall be accessible for maintenance purposes.
- The appliance shall be stored so as to prevent mechanical damage from occurring.
- Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorises their competence to handle refrigerants safely in accordance with an industry recognised assessment specification.
- Servicing shall only be performed as recommended by the equipment manufacturer. Maintenance and repair requiring the assistance of other skilled personnel shall be carried out under the supervision of the person competent in the use of flammable refrigerants.
- When mechanical connectors are reused indoors, sealing parts shall be renewed.
- When flared joints are reused indoors, the flare part shall be re-fabricated.

Minimum Floor Area

Refer the minimum floor area depending on the installation height. If outdoor units are installed indoors, outdoor units also meet the minimum floor area.

m (kg)	Minimum Floor Area (m ²)		
	Floor Standing	Wall Mounted	Ceiling Mounted
< 1.224	—	—	—
1.224	12.90	1.43	0.956
1.2	12.36	1.37	0.92
1.4	16.82	1.87	1.25
1.6	21.97	2.44	1.63
1.8	27.80	3.09	2.07
2.0	34.32	3.81	2.55
2.2	41.53	4.61	3.09
2.4	49.42	5.49	3.68

- m: Total refrigerant amount in the system
- Total refrigerant amount: Factory refrigerant charge + Additional refrigerant amount

PRECHECK PRIOR TO SERVICE

[Checks to the area]

Prior to beginning work on systems containing flammable refrigerants, safety checks are necessary to ensure that the risk of ignition is minimised. For repair to the refrigerating system, [General work area] to [Ventilated area] shall be completed prior to conducting work on the system.

[Work procedure]

Work shall be undertaken under a controlled procedure so as to minimize the risk of a flammable gas or vapour being present while the work is being performed.

[General work area]

All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.

[Checking for presence of refrigerant]

The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. non-sparking, adequately sealed or intrinsically safe.

[Presence of fire extinguisher]

If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO 2 fire extinguisher adjacent to the charging area.

[No ignition sources]

No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. "No Smoking" signs shall be displayed.

[Ventilated area]

Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any reled refrigerant and preferably expel it externally into the atmosphere.

[Checks to the refrigeration equipment]

Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance.

The following checks shall be applied to installations using flammable refrigerants:

- The actual refrigerant charge is in accordance with the room size within which the refrigerant containing parts are installed;
- The ventilation machinery and outlets are operating adequately and are not obstructed;
- If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant;
- Marking to the equipment continues to be visible and legible, Markings and signs that are illegible shall be corrected;
- Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.
- When mechanical connectors are reused indoors, sealing parts shall be renewed. When flared joints are reused indoors, the flare part shall be re-fabricated.

[Checks to electrical devices]

Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised.

Initial safety checks shall include:

- That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking;
- That no live electrical components and wiring are exposed while charging, recovering or purging the system;
- That there is continuity of earth bonding.

[Handling]

- The appliance should only be transported by two or more people holding the appliance securely.
- At delivery, the unit must be checked for damage. Any damage must be reported immediately to the carrier's claims agent.
- The tubing shall be protected to the extent that it will not be handled or used for carrying during moving of the product.

REPAIRS TO SEALED COMPONENTS

During repairs to sealed components, all electrical supplies shall be disconnected from the equipment being worked upon prior to any removal of sealed covers, etc. If it is absolutely necessary to have an electrical supply to equipment during servicing, then a permanently operating form of leak detection shall be located at the most critical point to warn of a potentially hazardous situation.

Particular attention shall be paid to the following to ensure that by working on electrical components, the casing is not altered in such a way that the level of protection is affected. This shall include damage to cables, excessive number of connections, terminals not made to original specification, damage to seals, incorrect fitting of glands, etc.

- Ensure that the apparatus is mounted securely.
- Ensure that seals or sealing materials have not degraded to the point that they no longer serve the purpose of preventing the ingress of flammable atmospheres. Replacement parts shall be in accordance with the manufacturer's specifications.

※NOTE: The use of silicon sealant can inhibit the effectiveness of some types of leak detection equipment.
Intrinsically safe components do not have to be isolated prior to working on them.

REPAIRS TO INTRINSICALLY SAFE COMPONENTS

Do not apply any permanent inductive or capacitance loads to the circuit without ensuring that this will not exceed the permissible voltage and current permitted for the equipment in use.

Intrinsically safe components are the only types that can be worked on while live in the presence of a flammable atmosphere. The test apparatus shall be at the correct rating.

Replace components only with parts specified by the manufacturer. Other parts may result in the ignition of refrigerant in the atmosphere from a leak.

CABLING

Check that cabling will not be subject to wear, corrosion, excessive pressure, vibration, sharp edges or any other adverse environmental effects. The check shall also take into account the effects of aging or continual vibration from sources such as compressors or fans.

DETECTION OF FLAMMABLE REFRIGERANTS

Under no circumstances shall potential sources of ignition be used in the searching for or detection of refrigerant leaks. A halide torch (or any other detector using a naked flame) shall not be used.

LEAK DETECTION METHODS

The following leak detection methods are deemed acceptable for all refrigerant systems.

Electronic leak detectors may be used to detect refrigerant leaks but, in the case of flammable refrigerants, the sensitivity may not be adequate, or may need re-calibration. (Detection equipment shall be calibrated in a refrigerant-free area.) Ensure that the detector is not a potential source of ignition and is suitable for the refrigerant used. Leak detection equipment shall be set at a percentage of the LFL of the refrigerant and shall be calibrated to the refrigerant employed, and the appropriate percentage of gas (25 % maximum) is confirmed.

Leak detection fluids are suitable for use with most refrigerants but the use of detergents containing chlorine shall be avoided as the chlorine may react with the refrigerant and corrode the copper pipe-work.

If a leak is suspected, all naked flames shall be removed/extinguished.

If a leakage of refrigerant is found which requires brazing, all of the refrigerant shall be recovered from the system, or isolated (by means of shut off valves) in a part of the system remote from the leak. For appliances containing flammable refrigerants, oxygen free nitrogen (OFN) shall then be purged through the system both before and during the brazing process.

REMOVAL AND EVACUATION

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

- remove refrigerant;
- purge the circuit with inert gas;
- evacuate;
- purge again with inert gas;
- open the circuit by cutting or brazing.

When breaking into the refrigerant circuit to make repairs – or for any other purpose – conventional procedures shall be used. However, for flammable refrigerants it is important that best practice is followed since flammability is a consideration. The following procedure shall be adhered to:

For appliances containing flammable refrigerants, flushing shall be achieved by breaking the vacuum in the system with OFN and continuing to fill until the working pressure is achieved, then venting to atmosphere, and finally pulling down to a vacuum. This process shall be repeated until no refrigerant is within the system. When the final OFN charge is used, the system shall be vented down to atmospheric pressure to enable work to take place. This operation is absolutely vital if brazing operations on the pipe-work are to take place.

Ensure that the outlet for the vacuum pump is not close to any ignition sources and that ventilation is available.

CHARGING PROCEDURE

In addition to conventional charging procedures, the following requirements shall be followed.

- Ensure that contamination of different refrigerants does not occur when using charging equipment. Hoses or lines shall be as short as possible to minimise the amount of refrigerant contained in them.
- Cylinders shall be kept upright.
- Ensure that the refrigeration system is earthed prior to charging the system with refrigerant.
- Label the system when charging is complete (if not already).
- Extreme care shall be taken not to overfill the refrigeration system.

Prior to recharging the system, it shall be pressure-tested with the appropriate purging gas. The system shall be leak-tested on completion of charging but prior to commissioning. A follow up leak test shall be carried out prior to leaving the site.

DECOMMISSIONING

Before carrying out this procedure, it is essential that the technician is completely familiar with the equipment and all its detail. It is recommended good practice that all refrigerants are recovered safely. Prior to the task being carried out, an oil and refrigerant sample shall be taken in case analysis is required prior to re-use of reclaimed refrigerant. It is essential that electrical power is available before the task is commenced. The treatment of the refrigerant, oil and other parts must comply with the applicable legislation.

- a) Become familiar with the equipment and its operation.
- b) Isolate appliance electrically.
- c) Before attempting the procedure ensure that:
 - mechanical handling equipment is available, if required, for handling refrigerant cylinders;
 - all personal protective equipment is available and being used correctly;
 - the recovery process is supervised at all times by a competent person;
 - recovery equipment and cylinders conform to the appropriate standards.
- d) Pump down refrigerant system, if possible.
- e) If a vacuum is not possible, make a manifold so that refrigerant can be removed from various parts of the system.
- f) Make sure that cylinder is situated on the scales before recovery takes place.
- g) Start the recovery machine and operate in accordance with manufacturer's instructions.
- h) Do not overfill cylinders. (No more than 80 % volume liquid charge).
- i) Do not exceed the maximum pressure of the cylinder, even temporarily.
- j) When the cylinders have been filled correctly and the process completed, make sure that the cylinders and the equipment are removed from site promptly and all isolation valves on the equipment are closed off.
- k) Recovered refrigerant shall not be charged into another refrigeration system unless it has been cleaned and checked.

LABELLING

Equipment shall be labelled stating that it has been de-commissioned and emptied of refrigerant. The label shall be dated and signed. For appliances containing flammable refrigerants, ensure that there are labels on the equipment stating the equipment contains flammable refrigerant.

RECOVERY

When removing refrigerant from a system, either for servicing or decommissioning, it is recommended good practice that all refrigerants are removed safely.

When transferring refrigerant into cylinders, ensure that only appropriate refrigerant recovery cylinders are employed. Ensure that the correct number of cylinders for holding the total system charge are available. All cylinders to be used are designated for the recovered refrigerant and labelled for that refrigerant (i.e. special cylinders for the recovery of refrigerant). Cylinders shall be complete with pressure-relief valve and associated shut-off valves in good working order. Empty recovery cylinders are evacuated and, if possible, cooled before recovery occurs.

The recovery equipment shall be in good working order with a set of instructions concerning the equipment that is at hand and shall be suitable for the recovery of all appropriate refrigerants including, when applicable, flammable refrigerants. In addition, a set of calibrated weighing scales shall be available and in good working order. Hoses shall be complete with leak-free disconnect couplings and in good condition. Before using the recovery machine, check that it is in satisfactory working order, has been properly maintained and that any associated electrical components are sealed to prevent ignition in the event of a refrigerant release. Consult manufacturer if in doubt.

The recovered refrigerant shall be returned to the refrigerant supplier in the correct recovery cylinder, and the relevant waste transfer note arranged. Do not mix refrigerants in recovery units and especially not in cylinders.

If compressors or compressor oils are to be removed, ensure that they have been evacuated to an acceptable level to make certain that flammable refrigerant does not remain within the lubricant. The evacuation process shall be carried out prior to returning the compressor to the suppliers. Only electric heating to the compressor body shall be employed to accelerate this process. When oil is drained from a system, it shall be carried out safely.



P/NO : 5401516714

January, 2019