


8. Parts catalog


Please note the following when using the parts catalog.

1. When ordering parts, always indicate the part number, part name, and the number of parts required.
2. It may take time for you to receive the parts. Make an inquiry about a rush order.
3. No further notice if the specification changes.
4. Parts marked $\triangle$ are critical for safety.
5. To maintain safety and performance, always replace the parts with the parts prescribed.

Description of screw abbreviations




Abbreviation	Description
PC screw	Cross recess flat head machine screw
PRC screw	Cross recess oval head machine screw
PP screw	Cross recess pan head machine screw
SW · PP screw	Cross recess pan head screw with spring washer
PPT screw	Cross recess tapping screw
PCT screw	Cross recess flat head tapping screw
PTT screw	Cross recess truss head tapping screw
PT screw	Cross recess truss head machine screw
SET screw	Slotted head stop screw
SQ · SET screw	Square head stop screw
P · SET screw	Pan head stop screw
PMT screw	Primer truss head screw
HS · SET screw	Hexagon head stop screw
P · R · W screw	Cross recess round wood screw
P · C · W screw	Cross recess flat head wood screw
P · R · C · W screw	Cross recess round and flat wood screw
R · W screw	Slotted round wood screw
PW · PP screw	Cross recess pan head screw with small washer
SW-PW · PP screw	Cross recess pan head machine screw with spring washer and flat washer

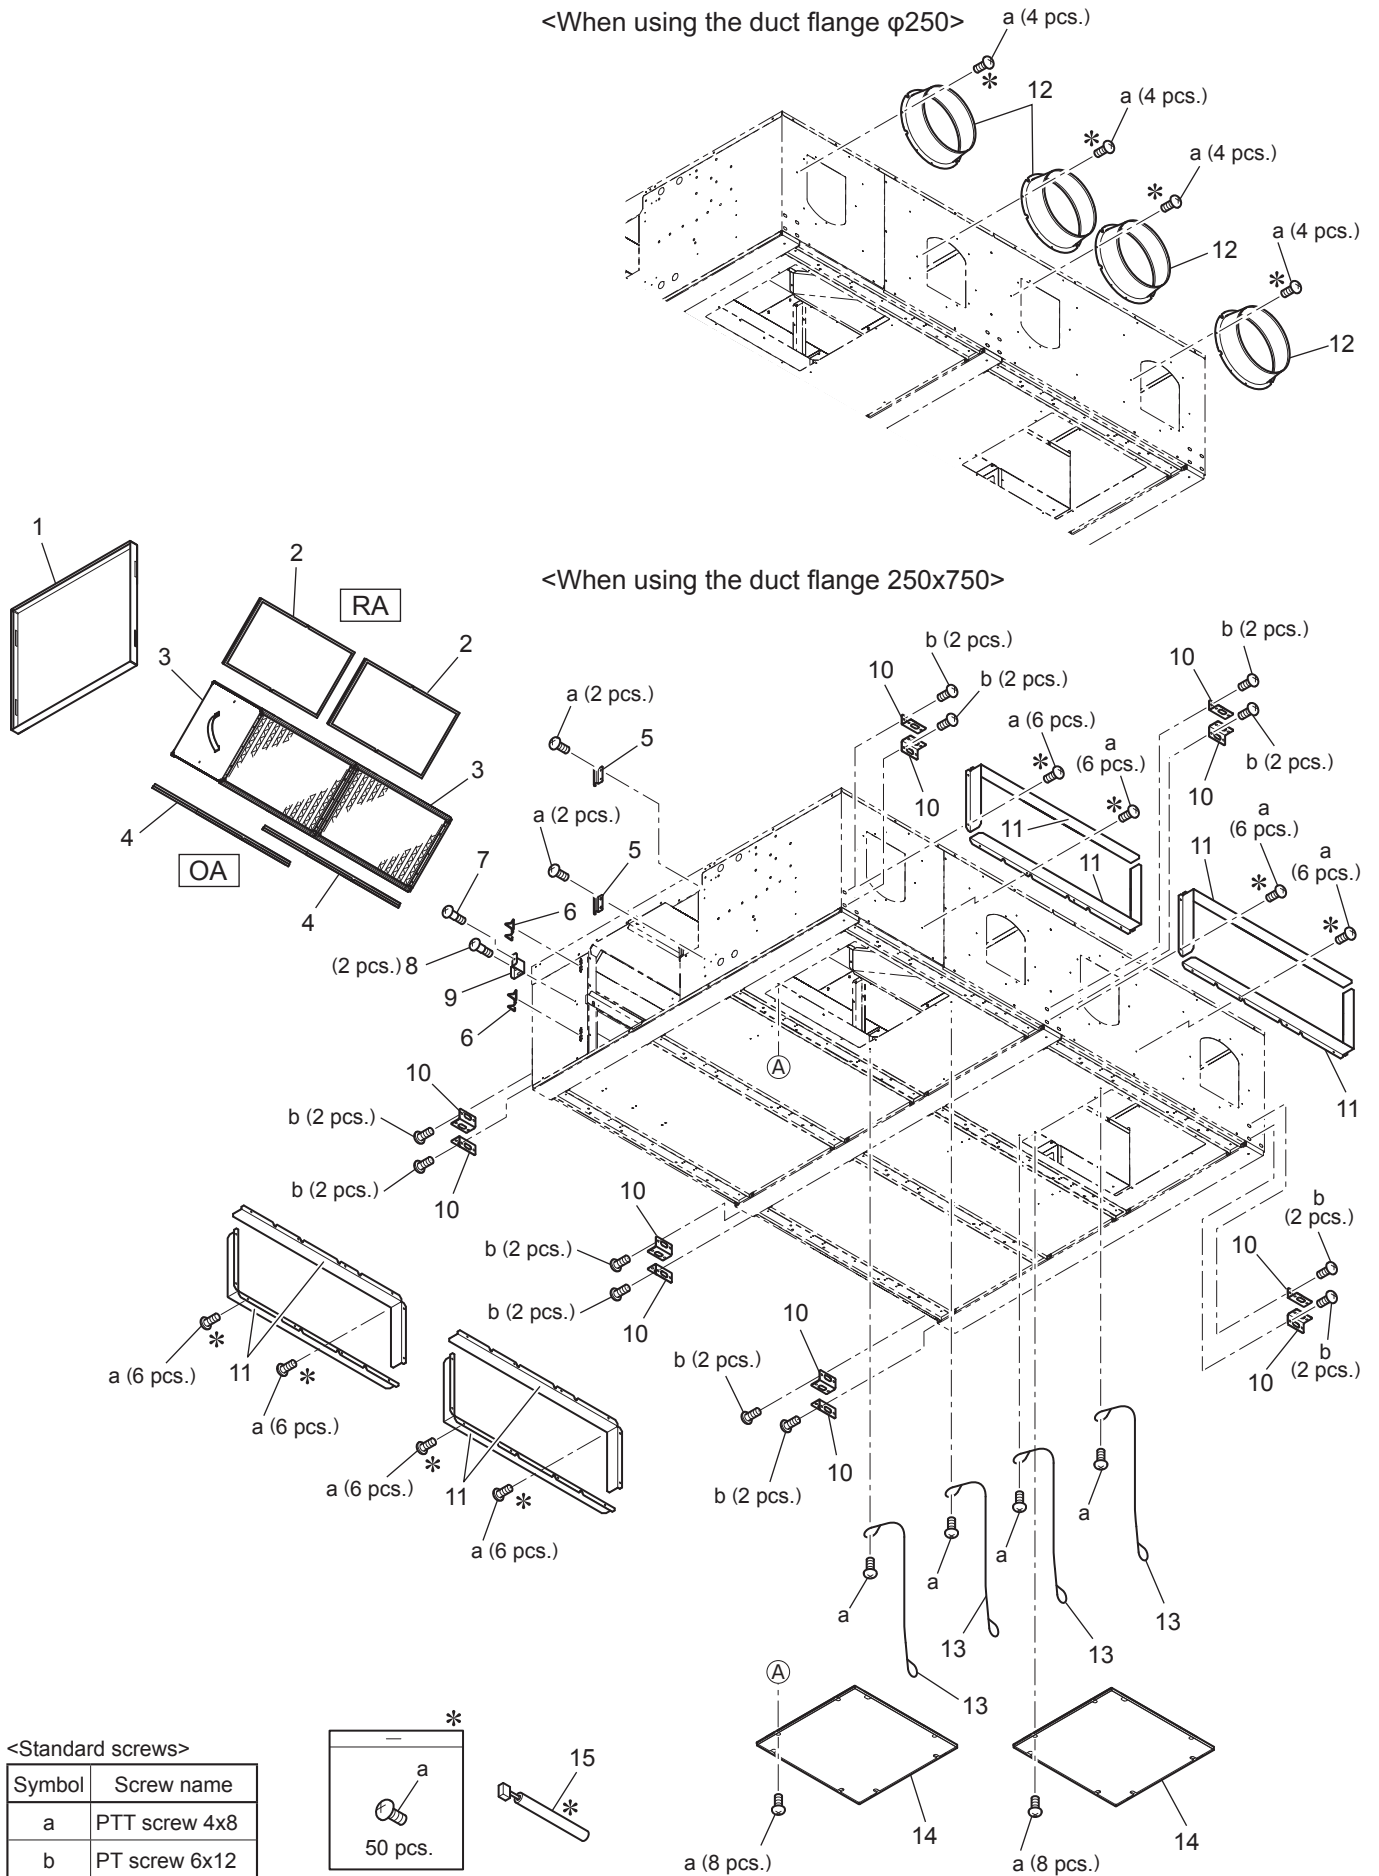

LGH-150RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	Y50 174 708	1		
2	Air filter (RA)	Y50 174 718	2	△	
3	Lossnay core	Y50 174 710	2	△	
4	Air filter (OA)	Y50 174 717	2	△	
5	Fix piece	Y50 123 722	2		
6	Hinge	R50 466 344	2		
7	Special screw 4×8	K81 469 018	4		
8	Special screw 4×8	Y50 169 045	2		
9	Fix piece	Y50 169 707	1		
10	Hanger	R50 054 383	12		
11	Flange	Y50 174 707	8		
12	Flange	R50 430 609	4		
13	Wire	R50 394 343	4		145mm
14	Maintenance cover	Y50 174 712	2		For the motors
15	Lead wire	Y50 047 231	1	△	100mm

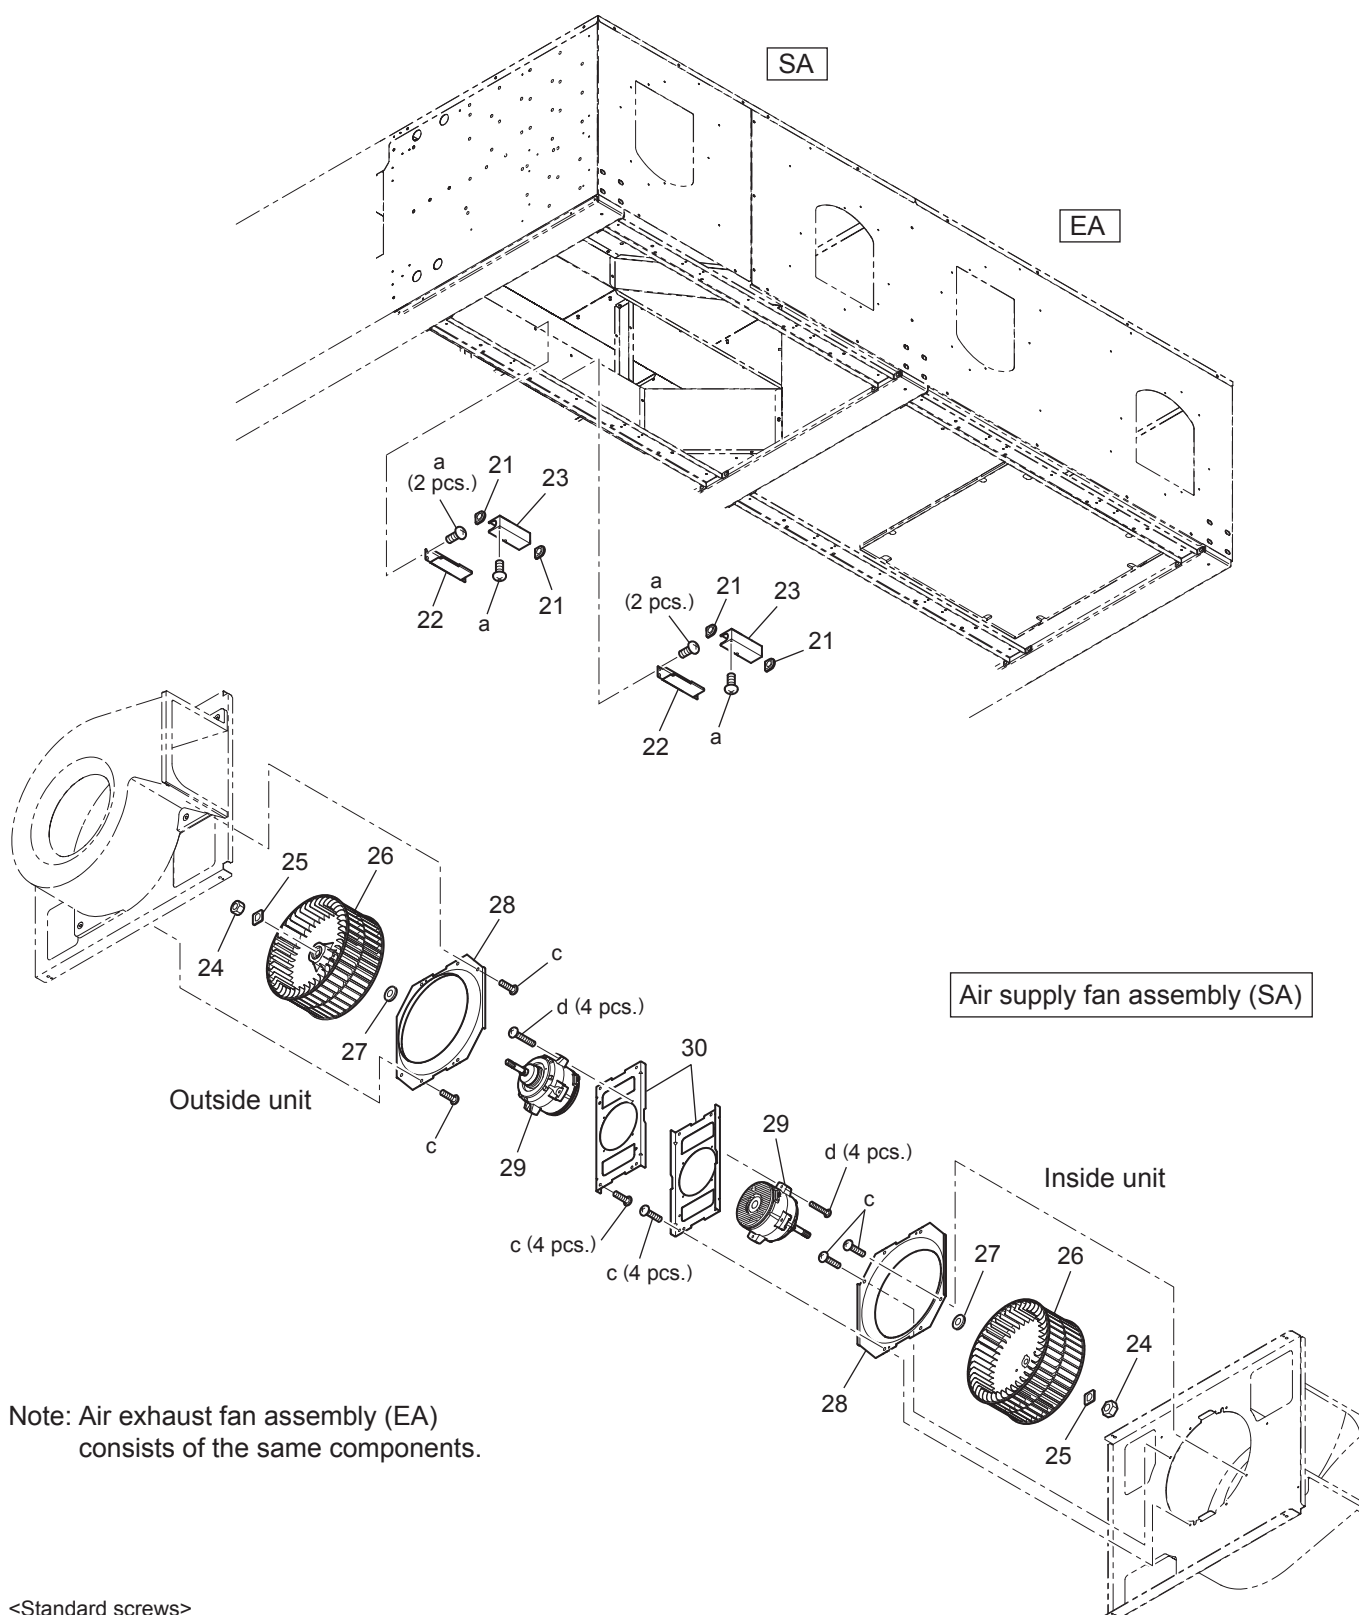


Note: Air exhaust fan assembly (EA)
consists of the same components.

<Standard screws>

Symbol	Screw name
a	PTT screw 4x8
c	PTT screw 5x10
d	PTT screw 4x25

LGH-150RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Cord bush	M45 649 226	8		Left-handed
22	Connector plate	Y50 115 710	4		
23	Connector cover	Y50 115 709	4		
24	Special nut (M12)	R50 218 067	4		
25	Tab washer	Y50 171 707	4		
26	Centrifugal fan	Y50 171 480	4	⚠	φ 245
27	Washer (12)	K83 466 113	4		
28	Inlet ring	R50 543 708	4		
29	Motor	Y50 174 453	4	⚠	
30	Motor fix plate	Y50 171 712	4		

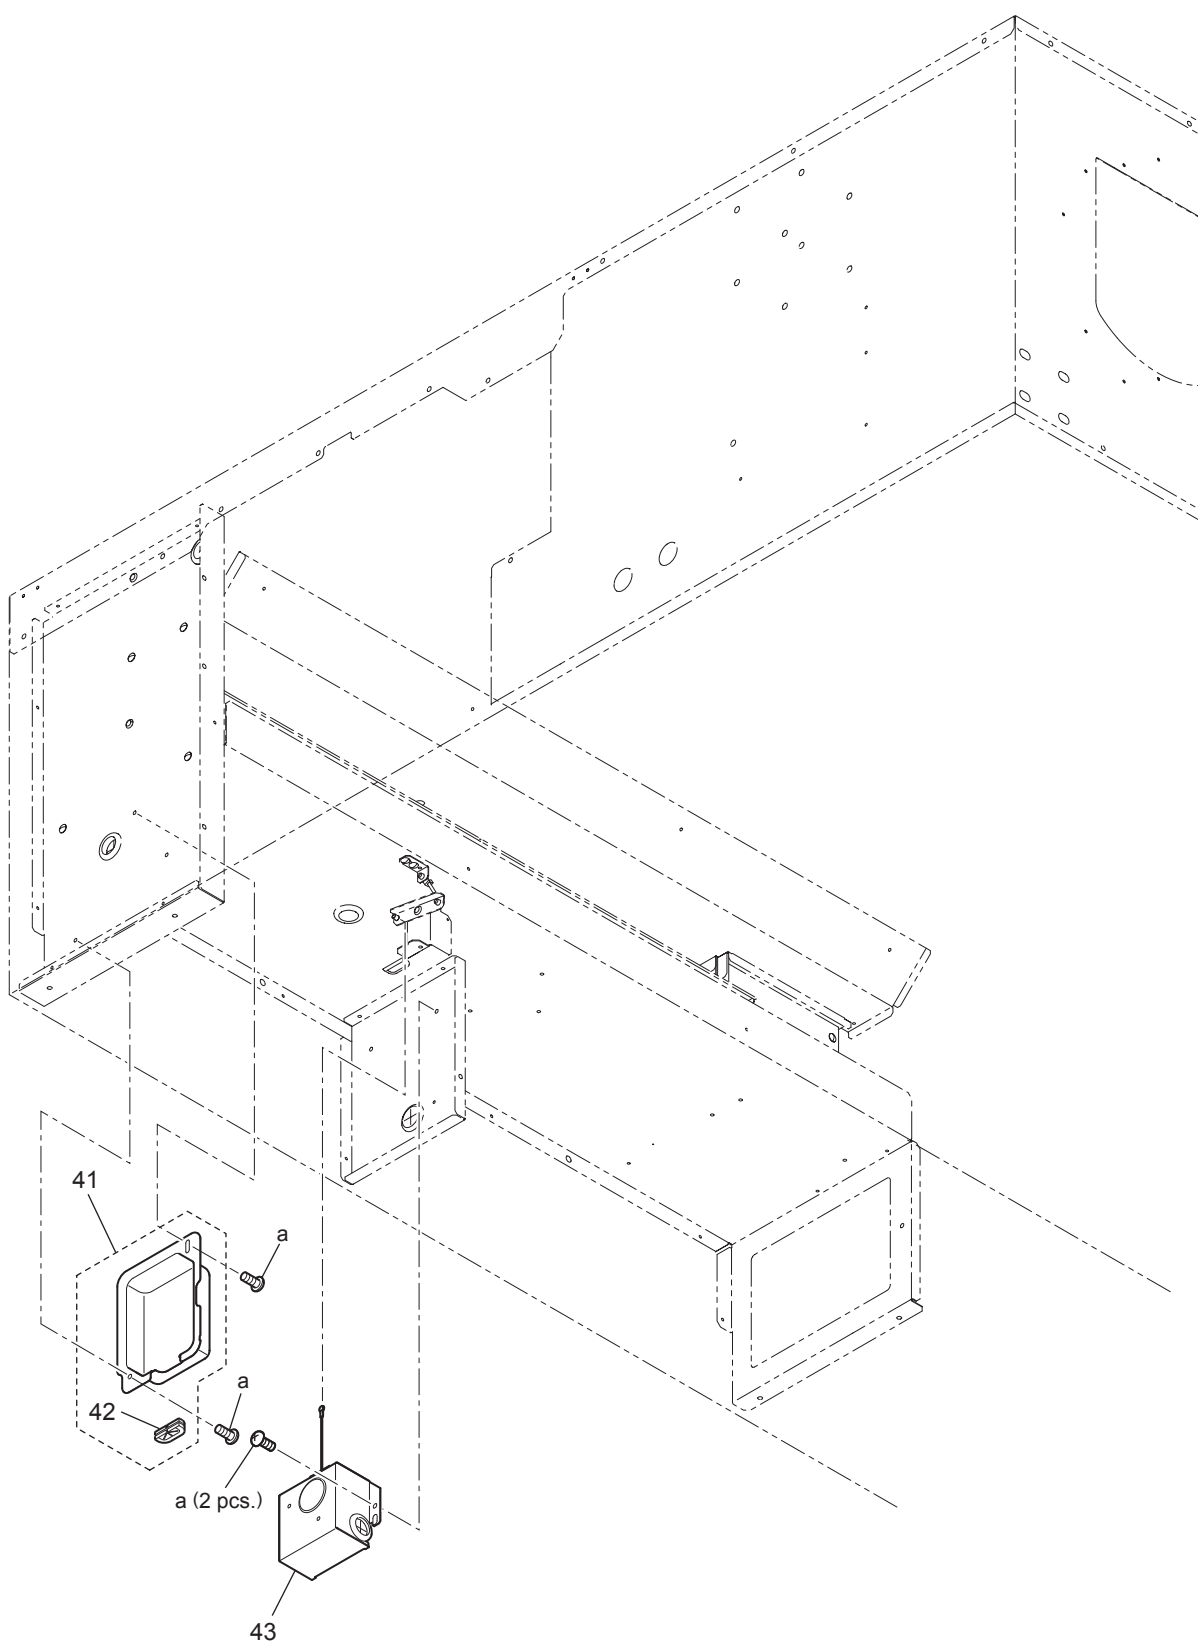


<Standard screws>

Symbol	Screw name
a	PTT screw 4x8

LGH-150RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cover	K81 636 390	1	⚠	With a Cord bush
42	Cord bush	K81 636 225	1		
43	Gm assembly	Y50 174 260	1		AC220・240V

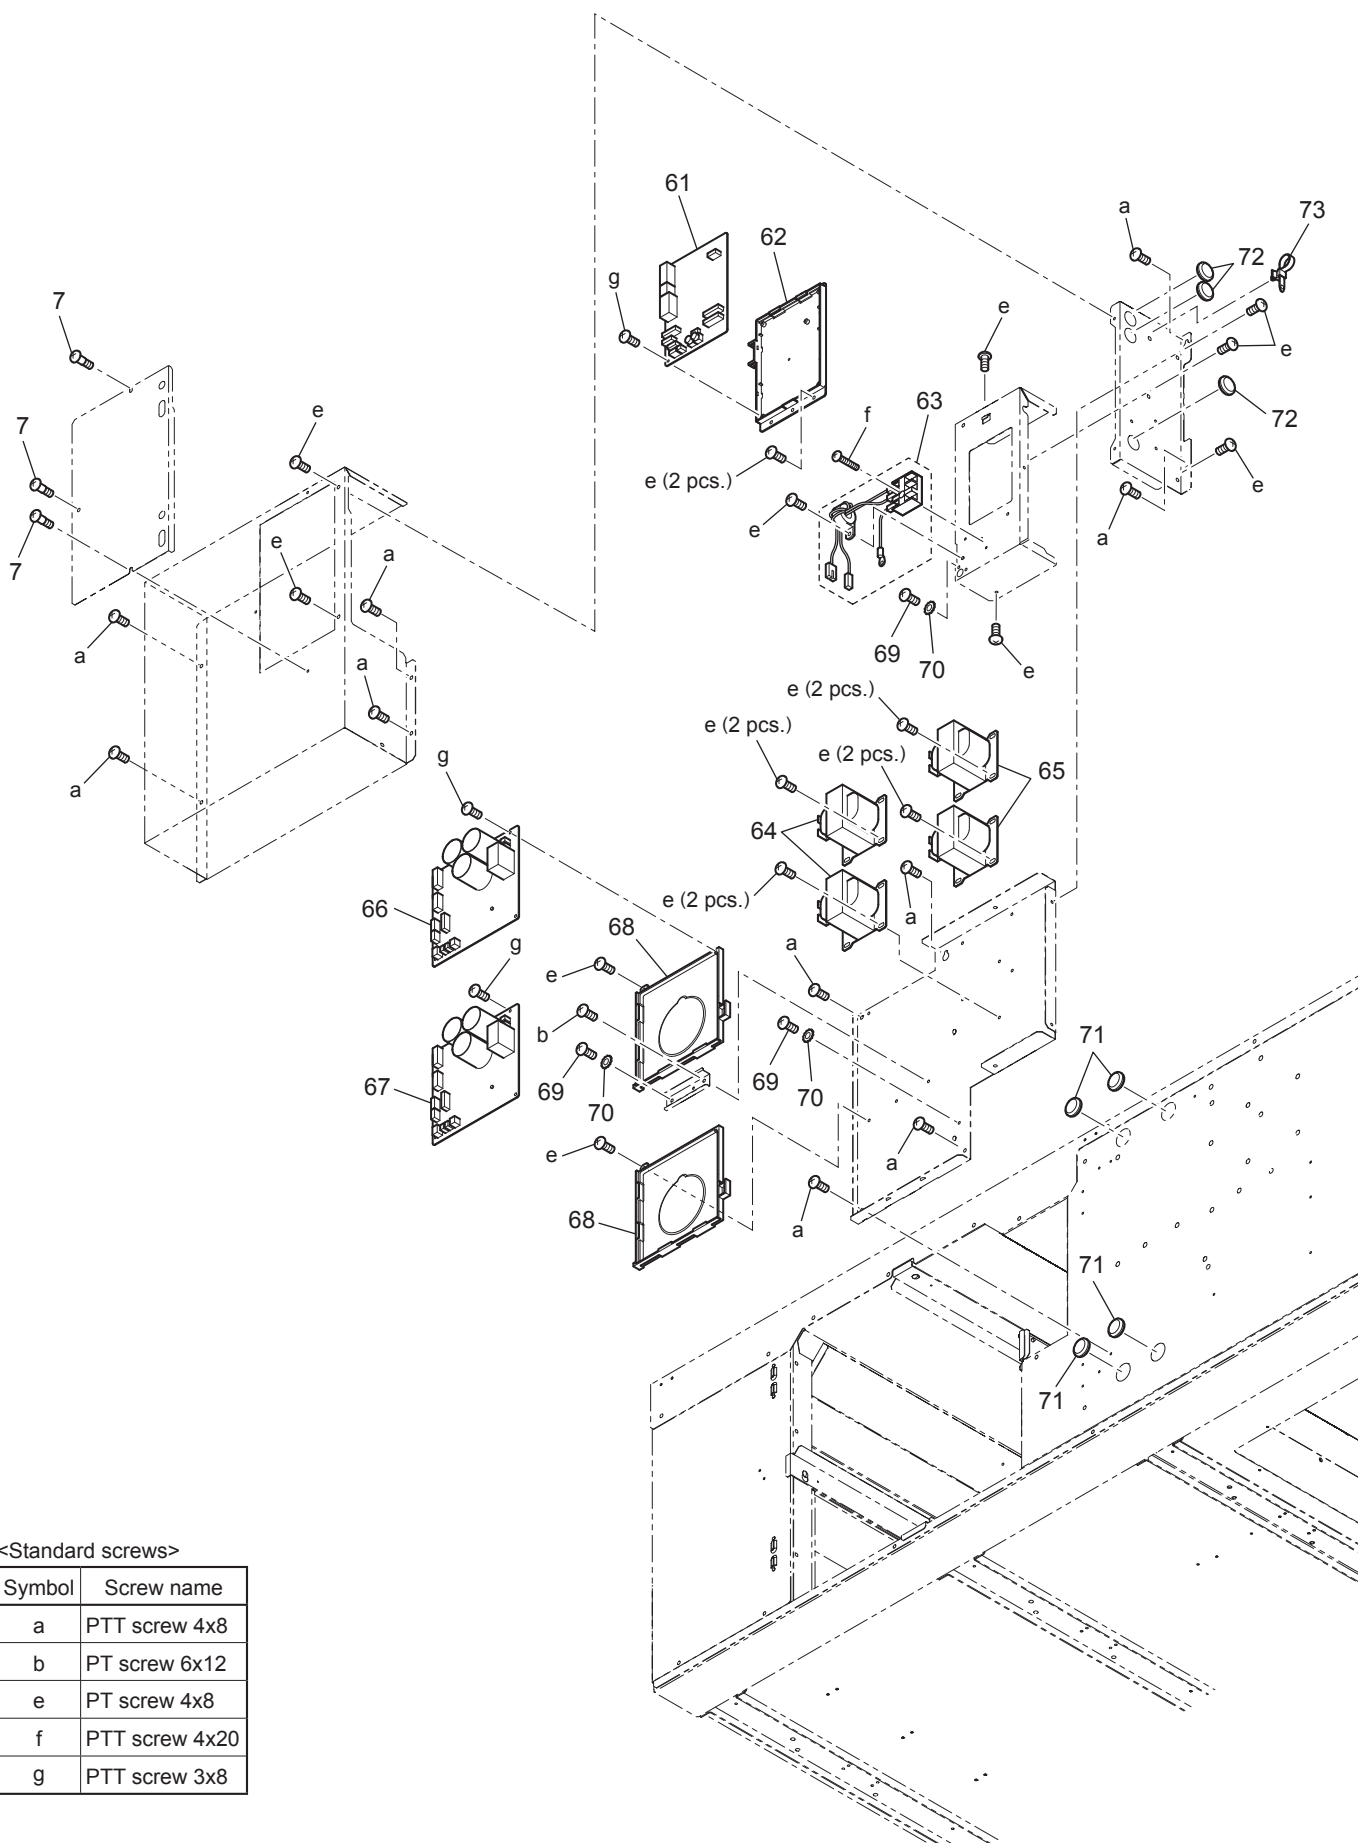


<Standard screws>

Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
e	PT screw 4x8
f	PTT screw 4x20
g	PTT screw 3x8


LGH-150RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
61	Circuit board	Y50 169 173	1	△	LG-X05DC-E・C With the lead wires AC10A
62	PCB fix plate	Y50 169 380	1		
63	Terminal block	Y50 174 216	1	△	
64	Reactor	Y50 172 179	2	△	
65	Reactor	Y50 169 179	2	△	
66	Circuit board	Y50 169 172	1	△	LG-X05DC-E・P LG-X05DC-E1
67	Circuit board	Y50 173 171	1	△	
68	PCB case	Y50 163 380	2		
69	PT screw 4×8 BS	H00 011 008	3		
70	Lock washer (4)	H00 013 076	3		
71	Bush	R50 476 225	4		
72	Bush	K83 223 225	3		
73	Cord band	Y55 001 223	1		

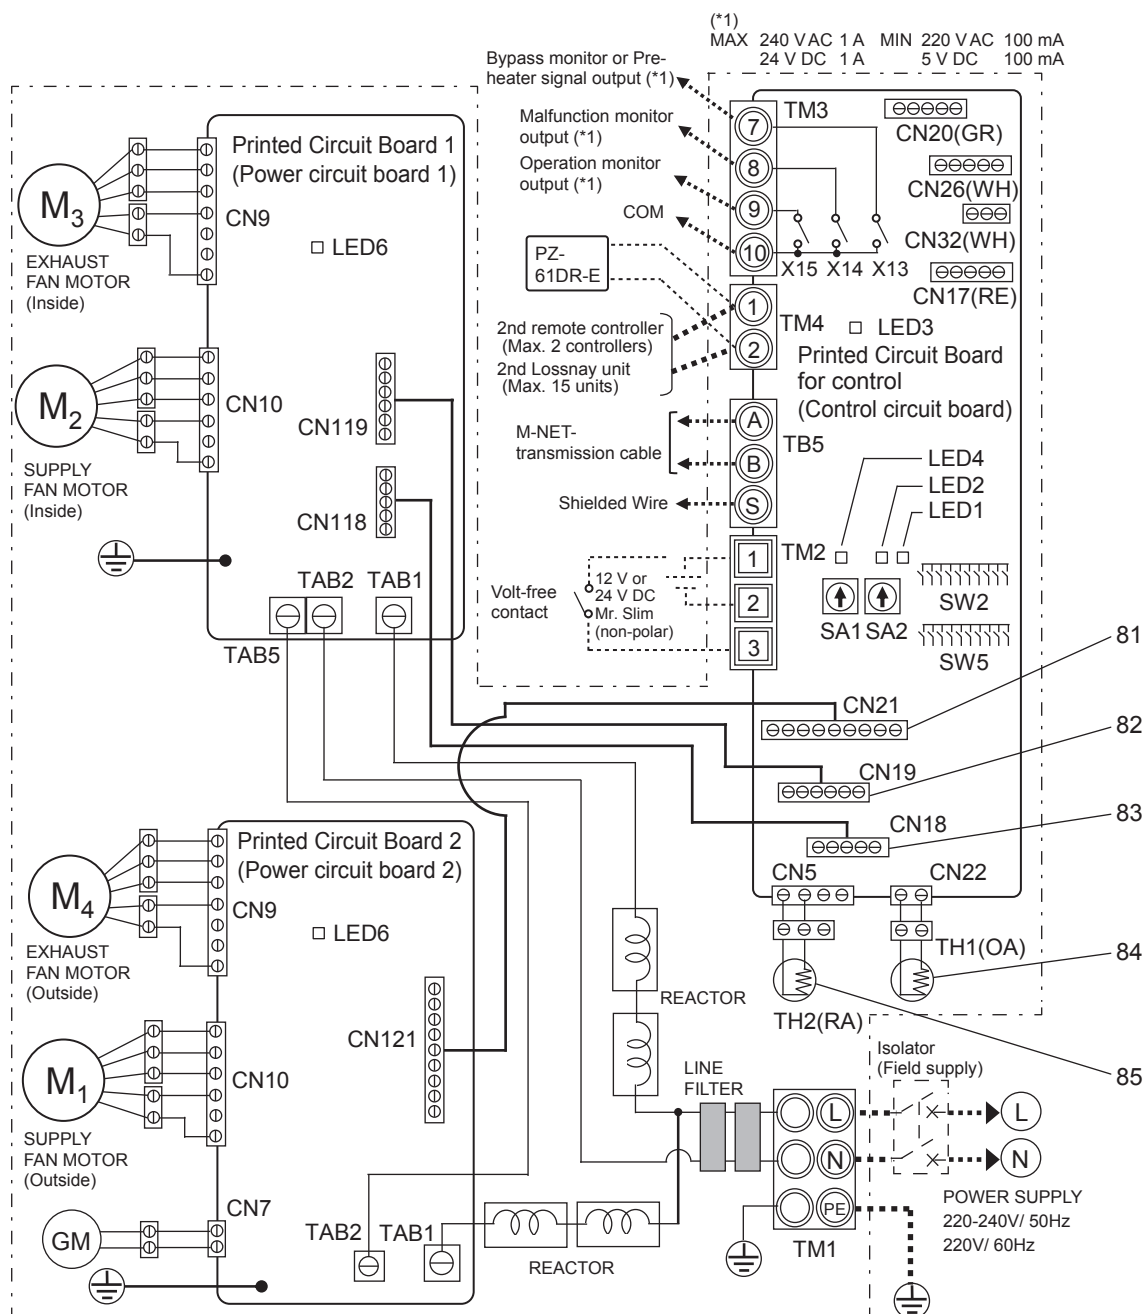


LGH-150RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Lead wire	Y50 174 215	1	△	CN21
82	Lead wire	Y50 174 214	1	△	CN19
83	Lead wire	Y50 174 213	1	△	CN18
84	Thermistor (OA)	Y50 174 217	1	△	-30°C to 100°C
85	Thermistor (RA)	Y50 174 223	1	△	-30°C to 100°C

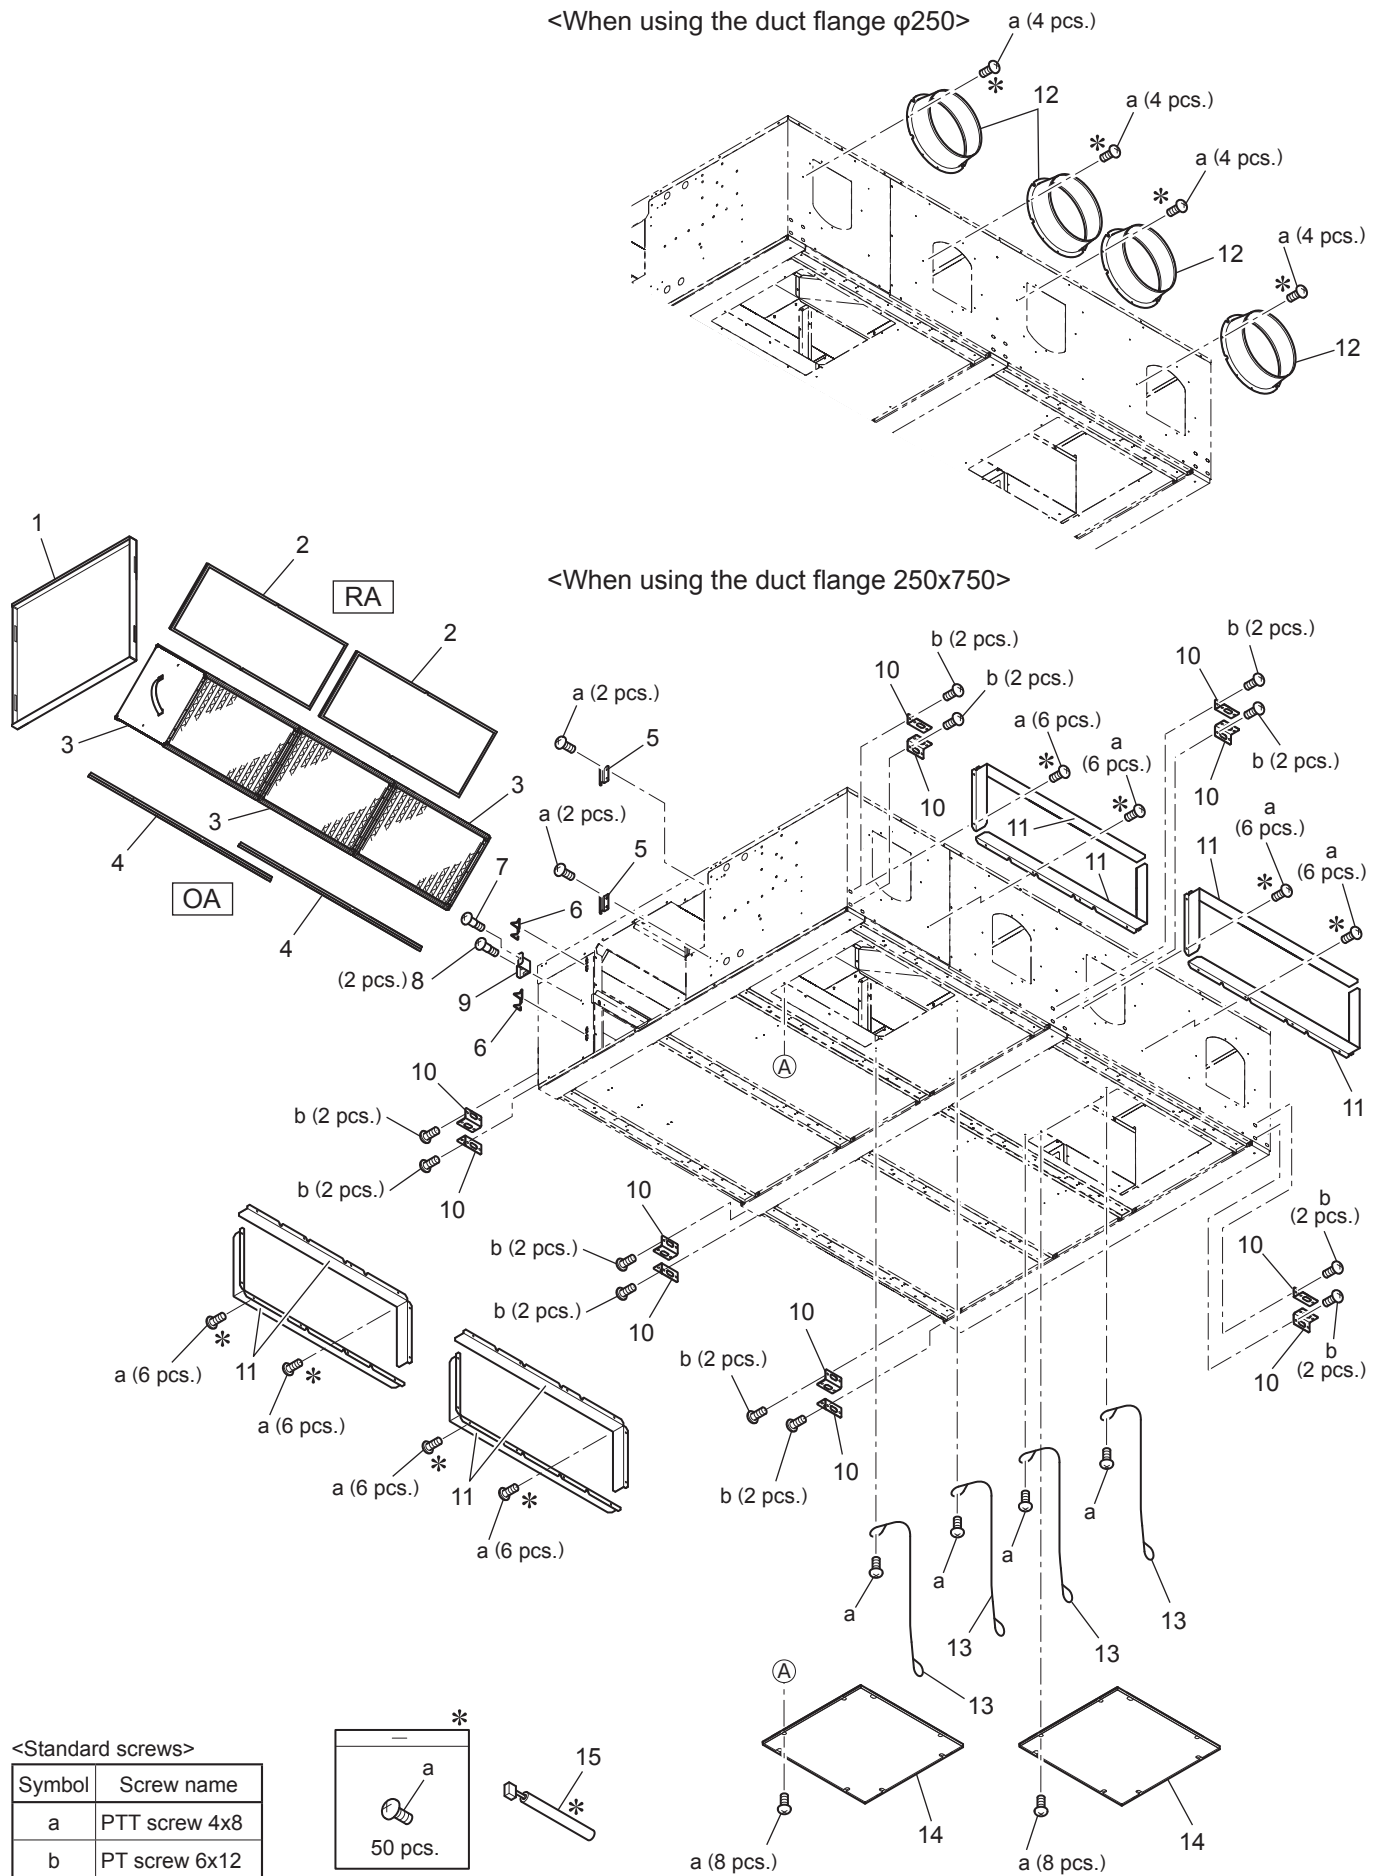

LGH-200RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	Y50 174 708	1		
2	Air filter (RA)	Y50 174 720	2	△	
3	Lossnay core	Y50 174 710	3	△	
4	Air filter (OA)	Y50 174 719	2	△	
5	Fix piece	Y50 123 722	2		
6	Hinge	R50 466 344	2		
7	Special screw 4×8	K81 469 018	4		
8	Special screw 4×8	Y50 169 045	2		
9	Fix piece	Y50 169 707	1		
10	Hanger	R50 054 383	12		
11	Flange	Y50 174 707	8		
12	Flange	R50 430 609	4		
13	Wire	R50 394 343	4		145mm
14	Maintenance cover	Y50 174 712	2		For the motors
15	Lead wire	Y50 047 231	1	△	100mm

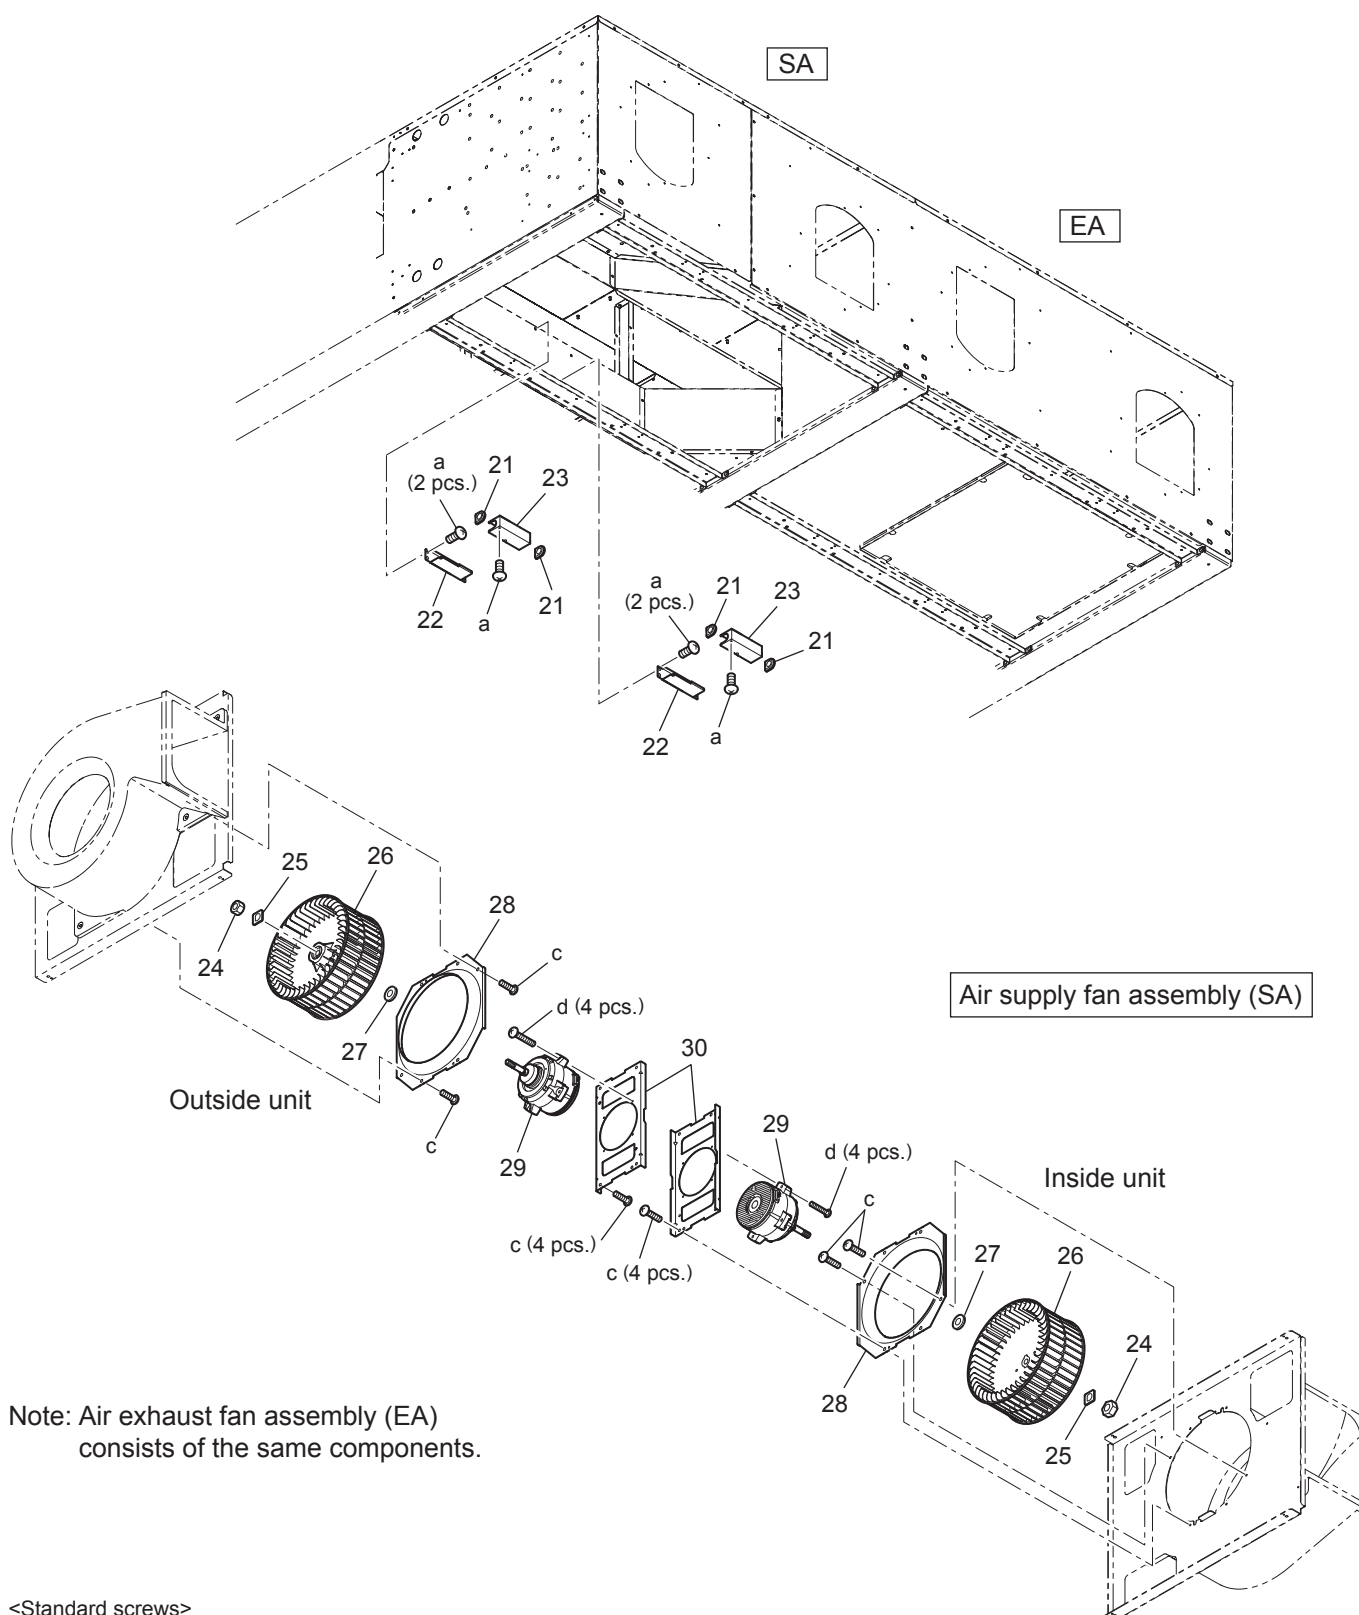


<Standard screws>

Symbol	Screw name
a	PTT screw 4x8
c	PTT screw 5x10
d	PTT screw 4x25

LGH-200RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Cord bush	M45 649 226	8		Left-handed
22	Connector plate	Y50 115 710	4		
23	Connector cover	Y50 115 709	4		
24	Special nut (M12)	R50 218 067	4		
25	Tab washer	Y50 171 707	4		
26	Centrifugal fan	Y50 171 480	4	⚠	φ 245
27	Washer (12)	K83 466 113	4		
28	Inlet ring	R50 543 708	4		
29	Motor	Y50 174 453	4	⚠	
30	Motor fix plate	Y50 171 712	4		

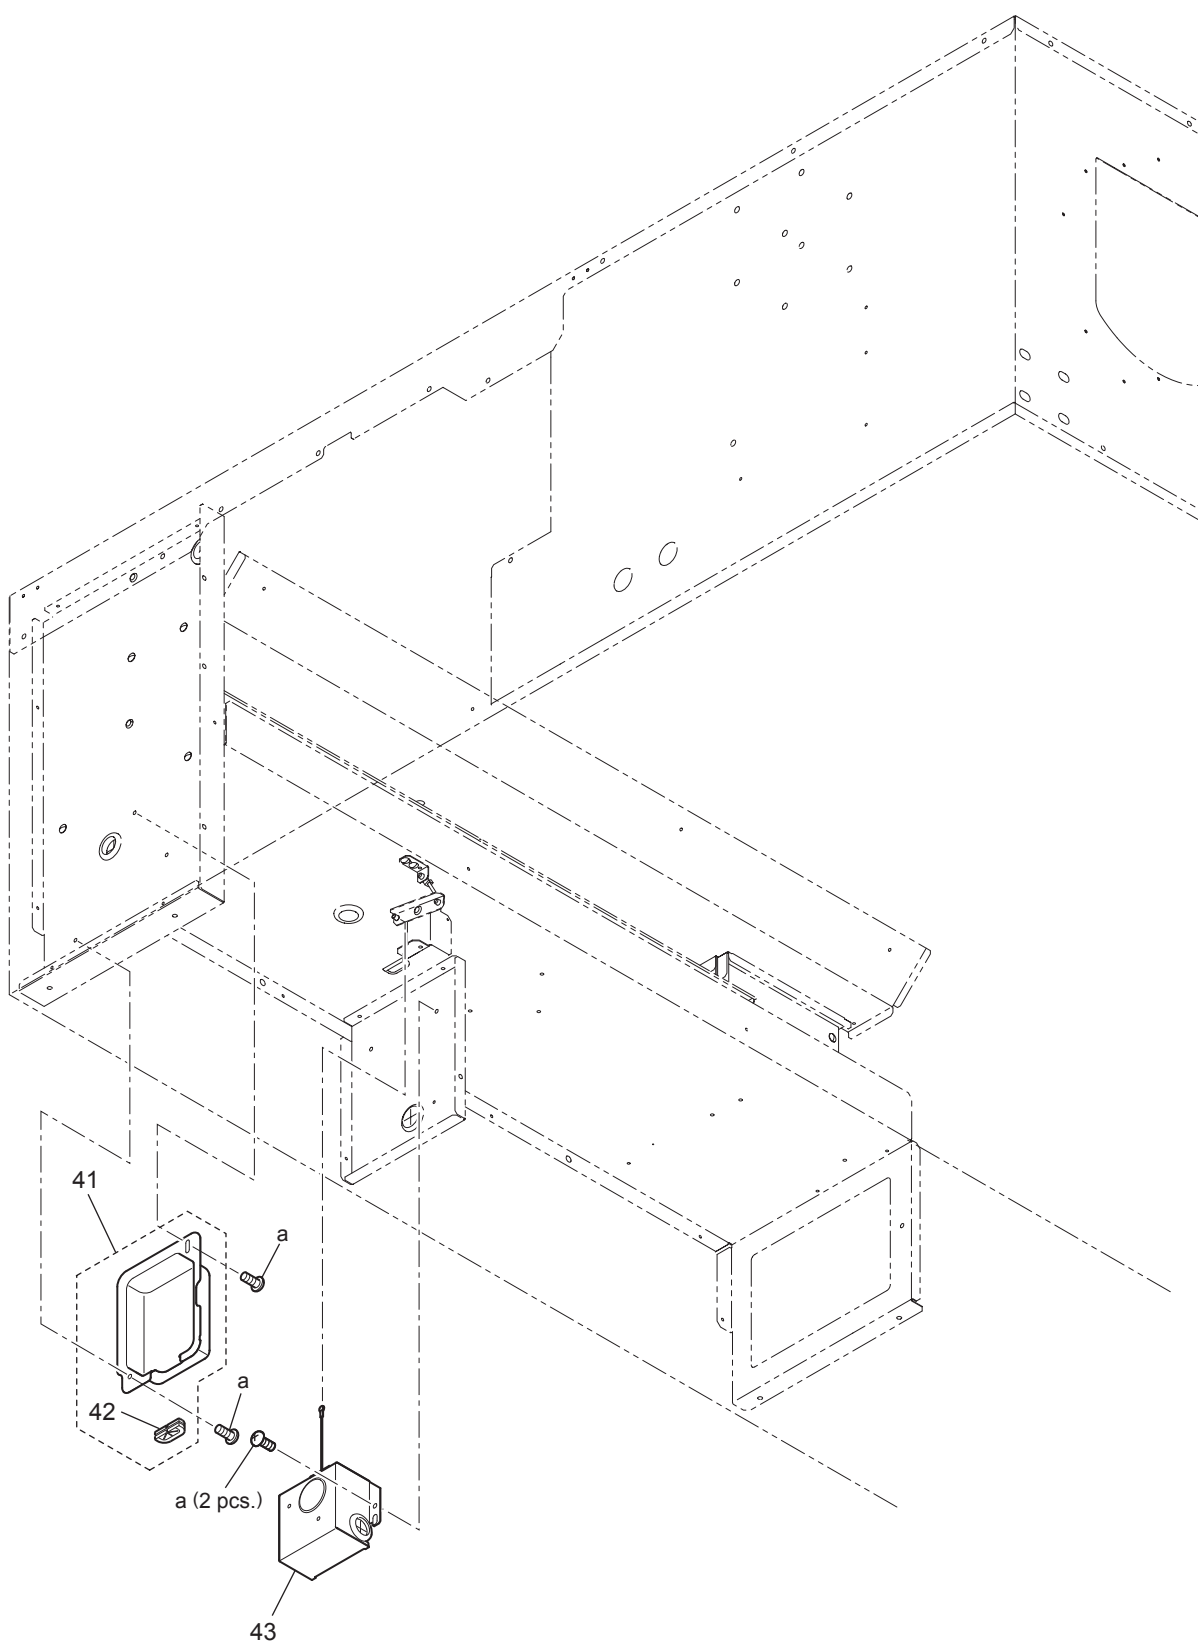


<Standard screws>

Symbol	Screw name
a	PTT screw 4x8


LGH-200RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cover	K81 636 390	1		With a Cord bush
42	Cord bush	K81 636 225	1		
43	Gm assembly	Y50 174 260	1	⚠	AC220・240V

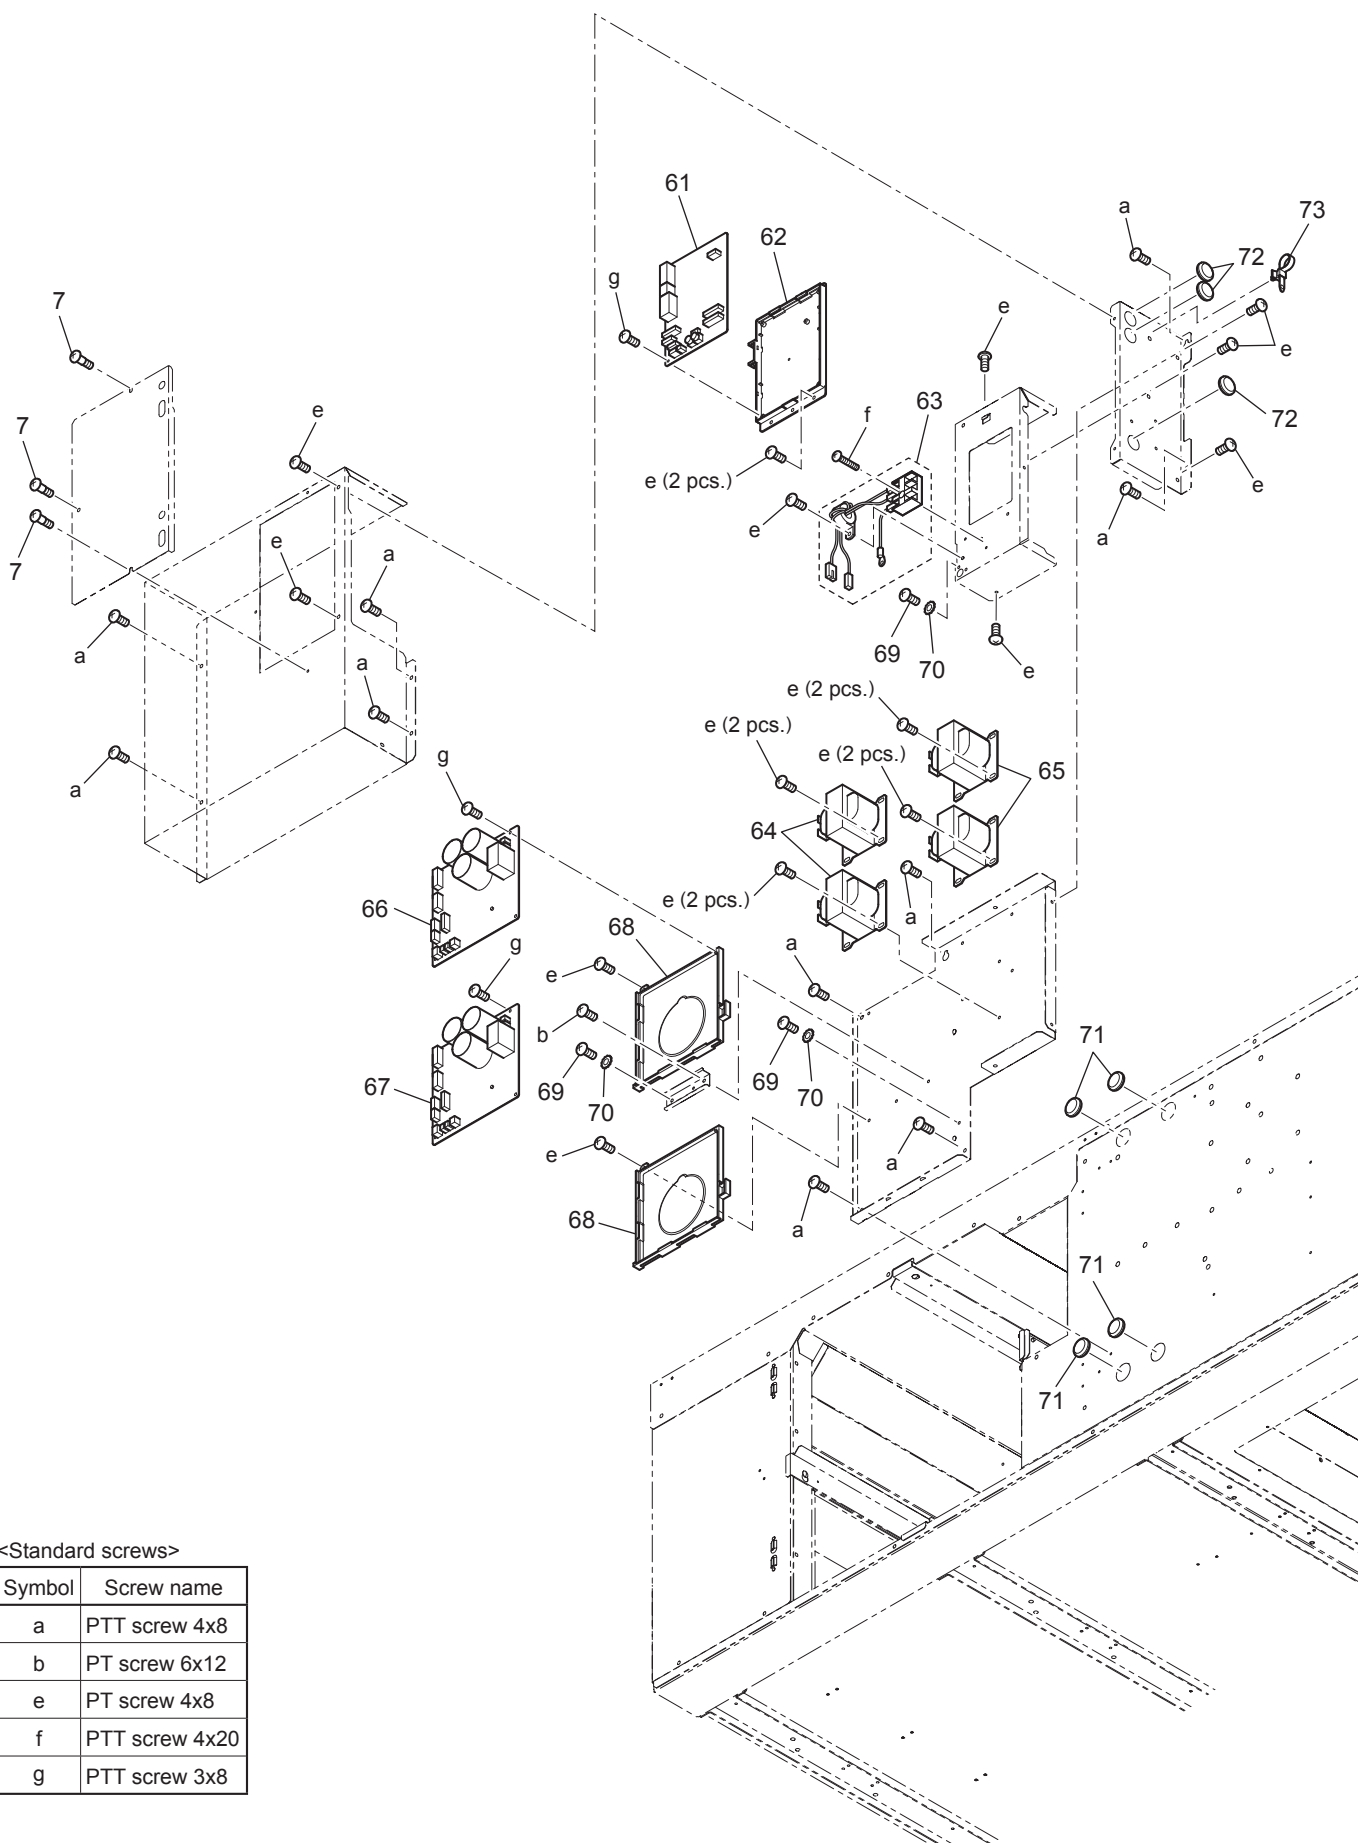


LGH-200RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
61	Circuit board	Y50 169 173	1	△	LG-X05DC-E・C With the lead wires AC10A
62	PCB fix plate	Y50 169 380	1		
63	Terminal block	Y50 174 216	1	△	
64	Reactor	Y50 172 179	2	△	
65	Reactor	Y50 169 179	2	△	
66	Circuit board	Y50 169 172	1	△	LG-X05DC-E・P LG-X05DC-E1
67	Circuit board	Y50 173 171	1	△	
68	PCB case	Y50 163 380	2		
69	PT screw 4×8 BS	H00 011 008	3		
70	Lock washer (4)	H00 013 076	3		
71	Bush	R50 476 225	4		
72	Bush	K83 223 225	3		
73	Cord band	Y55 001 223	1		

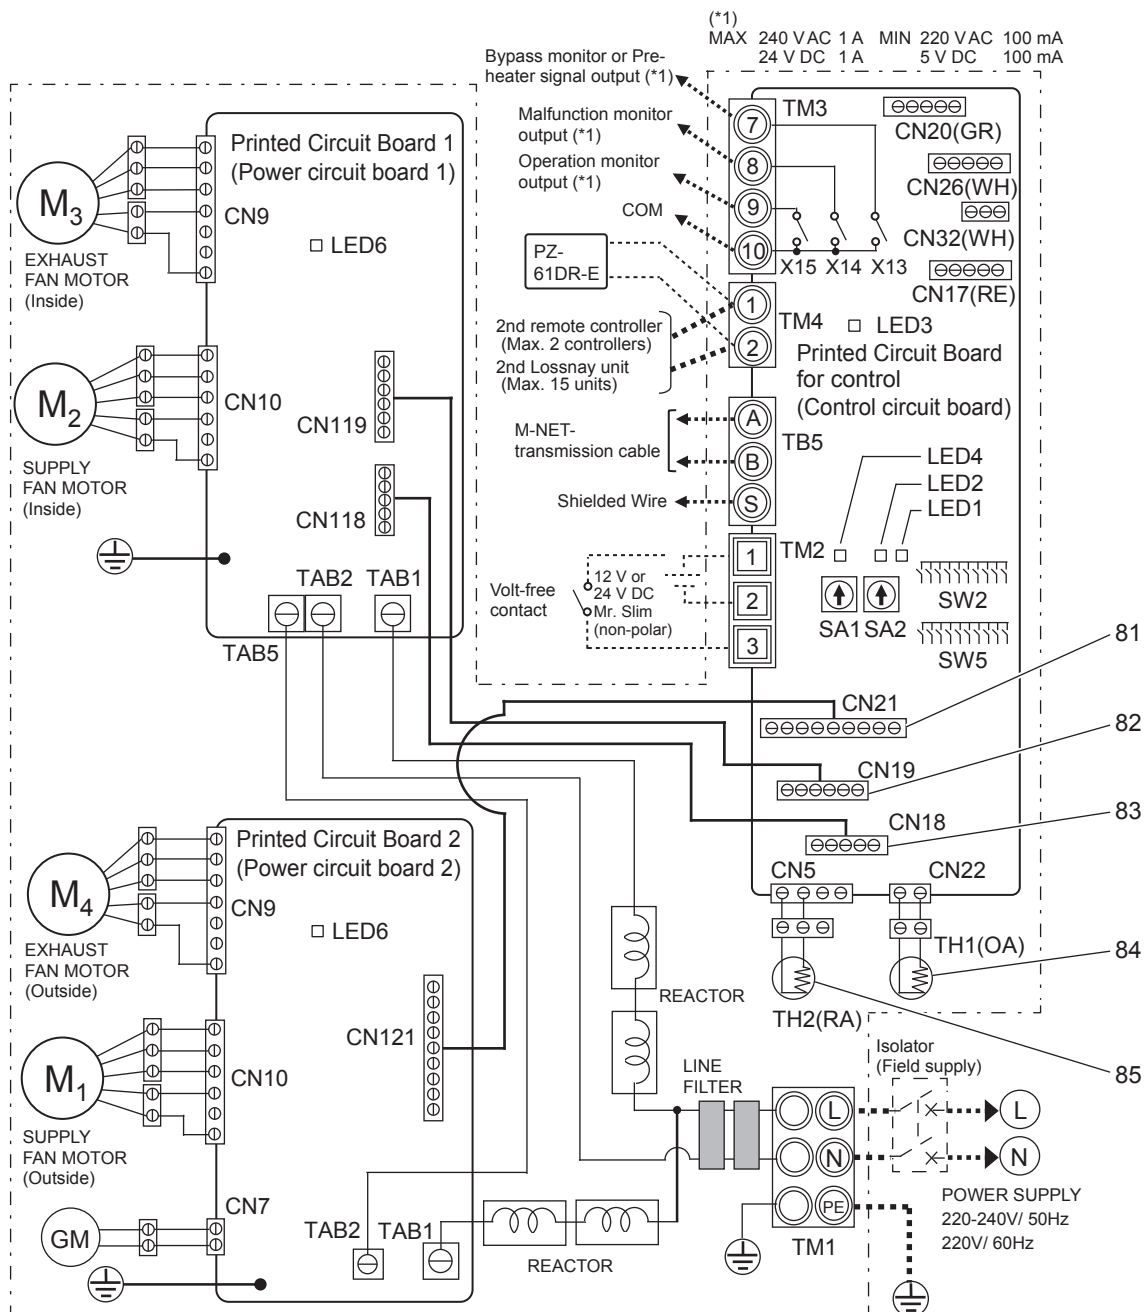


LGH-200RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Lead wire	Y50 174 215	1	△	CN21
82	Lead wire	Y50 174 214	1	△	CN19
83	Lead wire	Y50 174 213	1	△	CN18
84	Thermistor (OA)	Y50 174 217	1	△	-30°C to 100°C
85	Thermistor (RA)	Y50 174 223	1	△	-30°C to 100°C

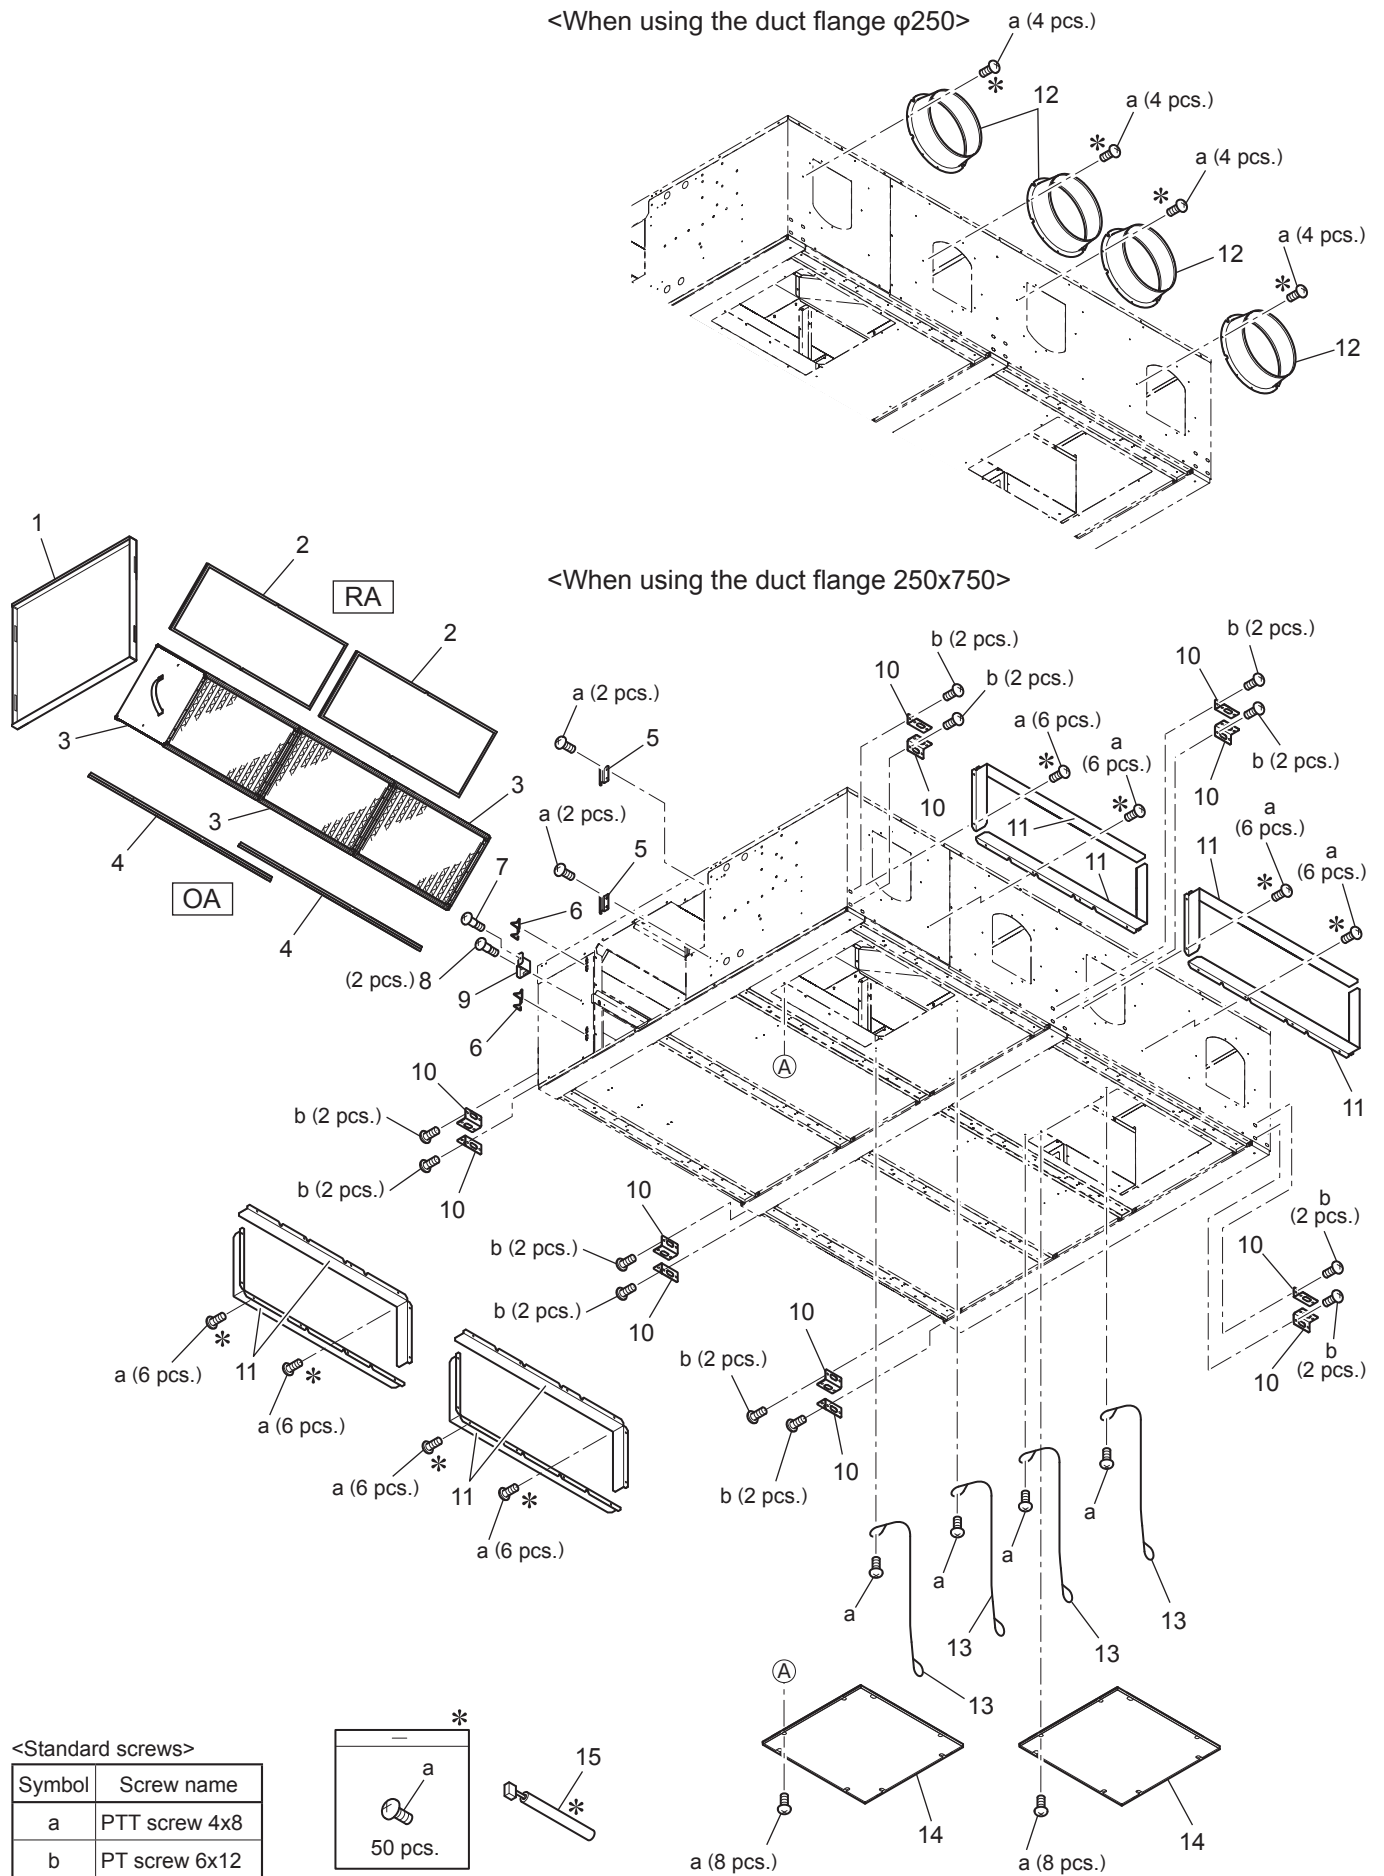

LGH-250RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
1	Maintenance cover	Y50 174 708	1		
2	Air filter (RA)	Y50 174 720	2	△	
3	Lossnay core	Y50 174 710	3	△	
4	Air filter (OA)	Y50 174 719	2	△	
5	Fix piece	Y50 123 722	2		
6	Hinge	R50 466 344	2		
7	Special screw 4×8	K81 469 018	4		
8	Special screw 4×8	Y50 169 045	2		
9	Fix piece	Y50 169 707	1		
10	Hanger	R50 054 383	12		
11	Flange	Y50 174 707	8		
12	Flange	R50 430 609	4		
13	Wire	R50 394 343	4		145mm
14	Maintenance cover	Y50 174 712	2		For the motors
15	Lead wire	Y50 047 231	1	△	100mm

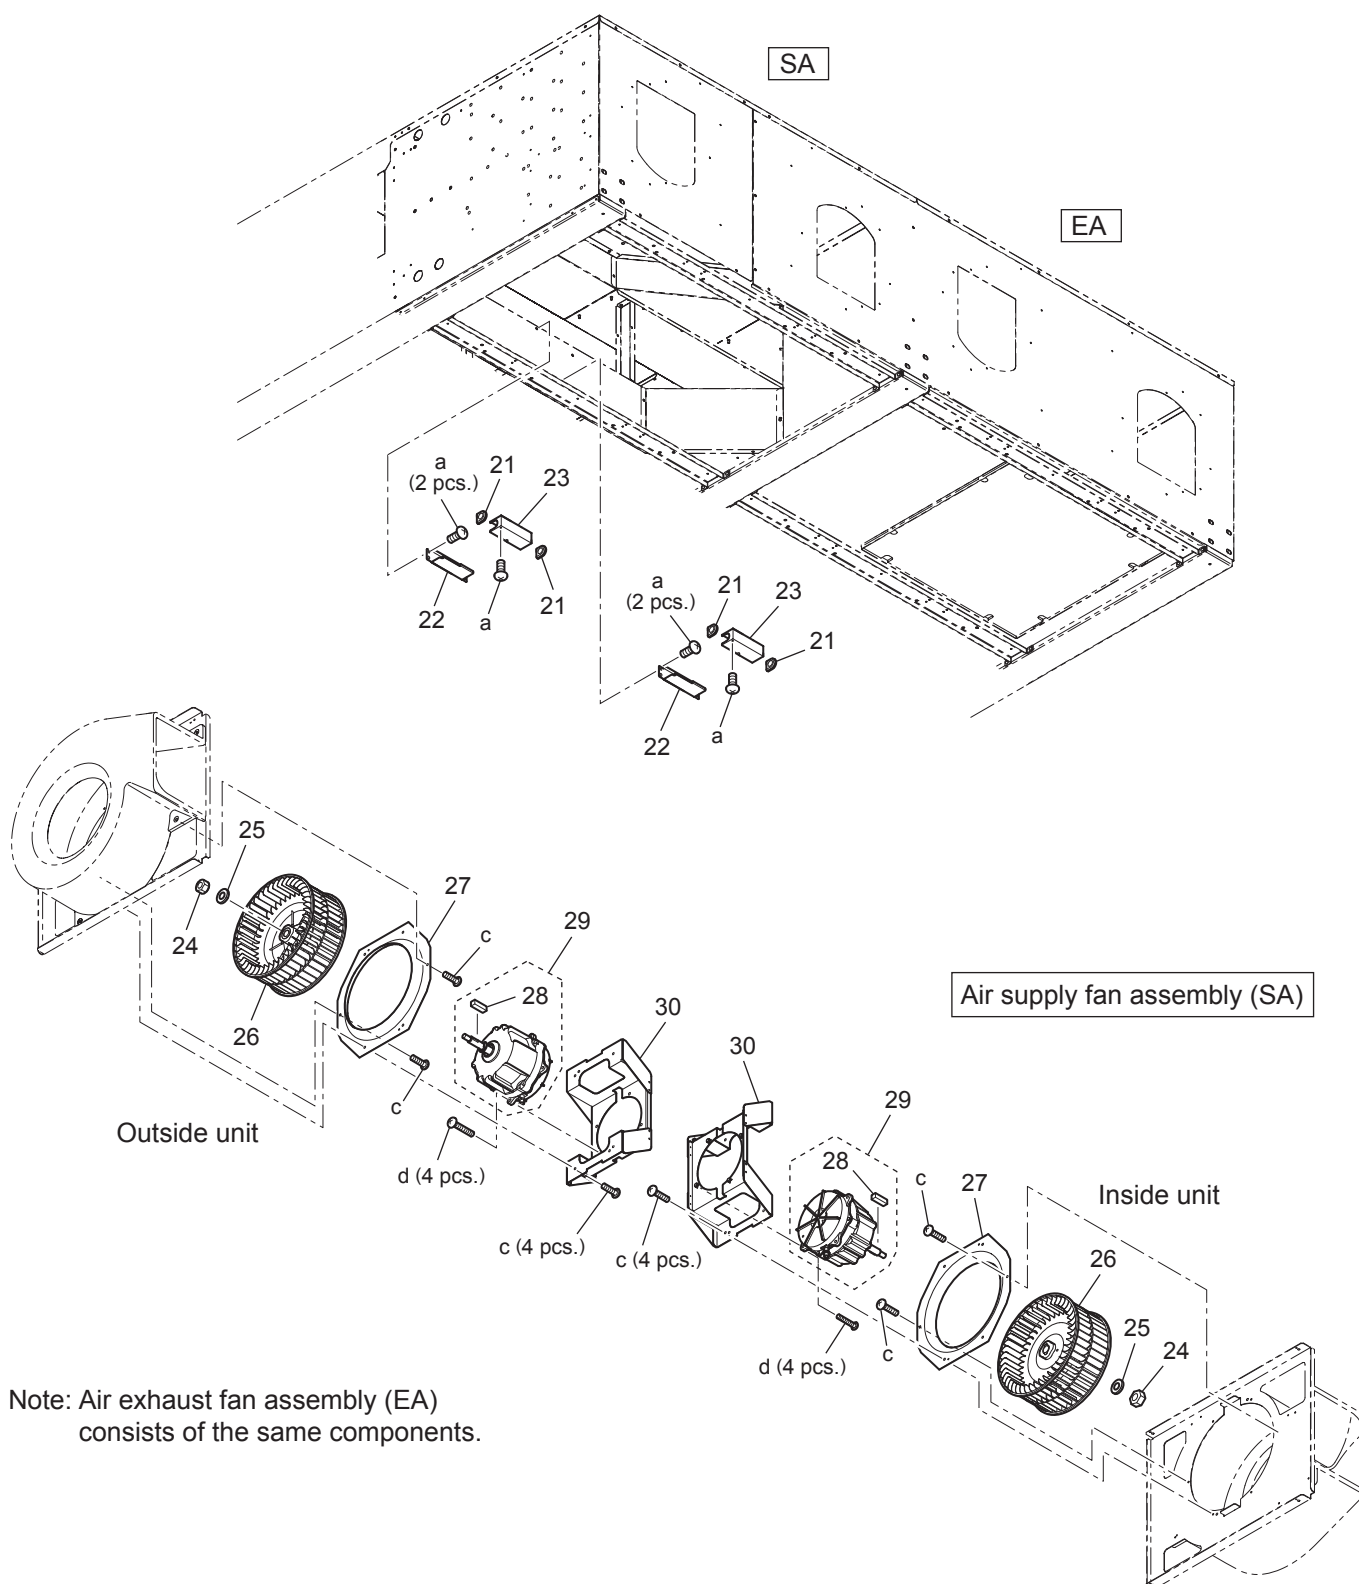


<Standard screws>

Symbol	Screw name
a	PTT screw 4x8
c	PTT screw 5x10
d	PT screw 6x20

LGH-250RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
21	Cord bush	M45 649 226	8		Left-handed
22	Connector plate	Y50 115 710	4		
23	Connector cover	Y50 115 709	4		
24	Special nut (M12)	R50 218 067	4		
25	Washer (12)	K83 466 113	4		
26	Centrifugal fan	R50 574 480	4	⚠	φ 280
27	Inlet ring	R50 574 707	4		5×5×15
28	Key	K83 262 104	4		
29	Motor	Y50 175 453	4	⚠	
30	Motor fix plate	Y50 175 712	4		

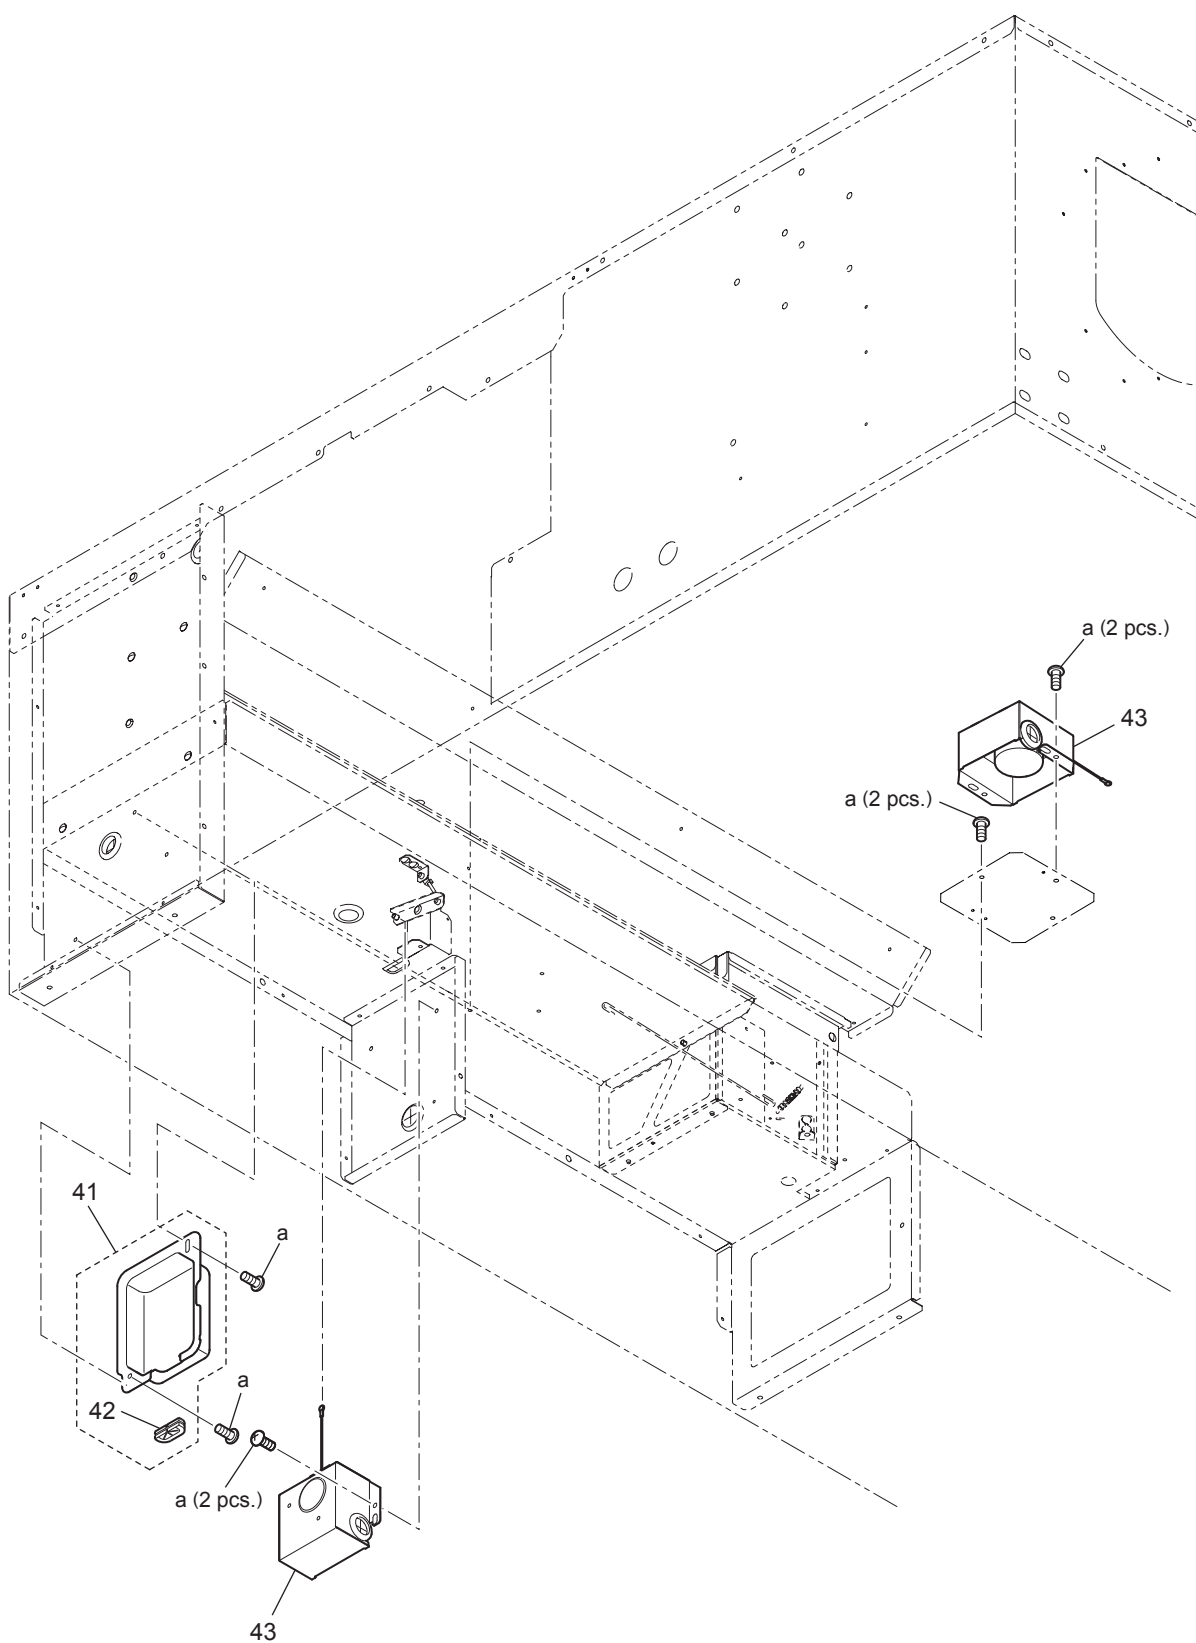


<Standard screws>

Symbol	Screw name
a	PTT screw 4x8

LGH-250RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
41	Cover	K81 636 390	1		With a Cord bush
42	Cord bush	K81 636 225	1		
43	Gm assembly	Y50 174 260	2	⚠	AC220・240V

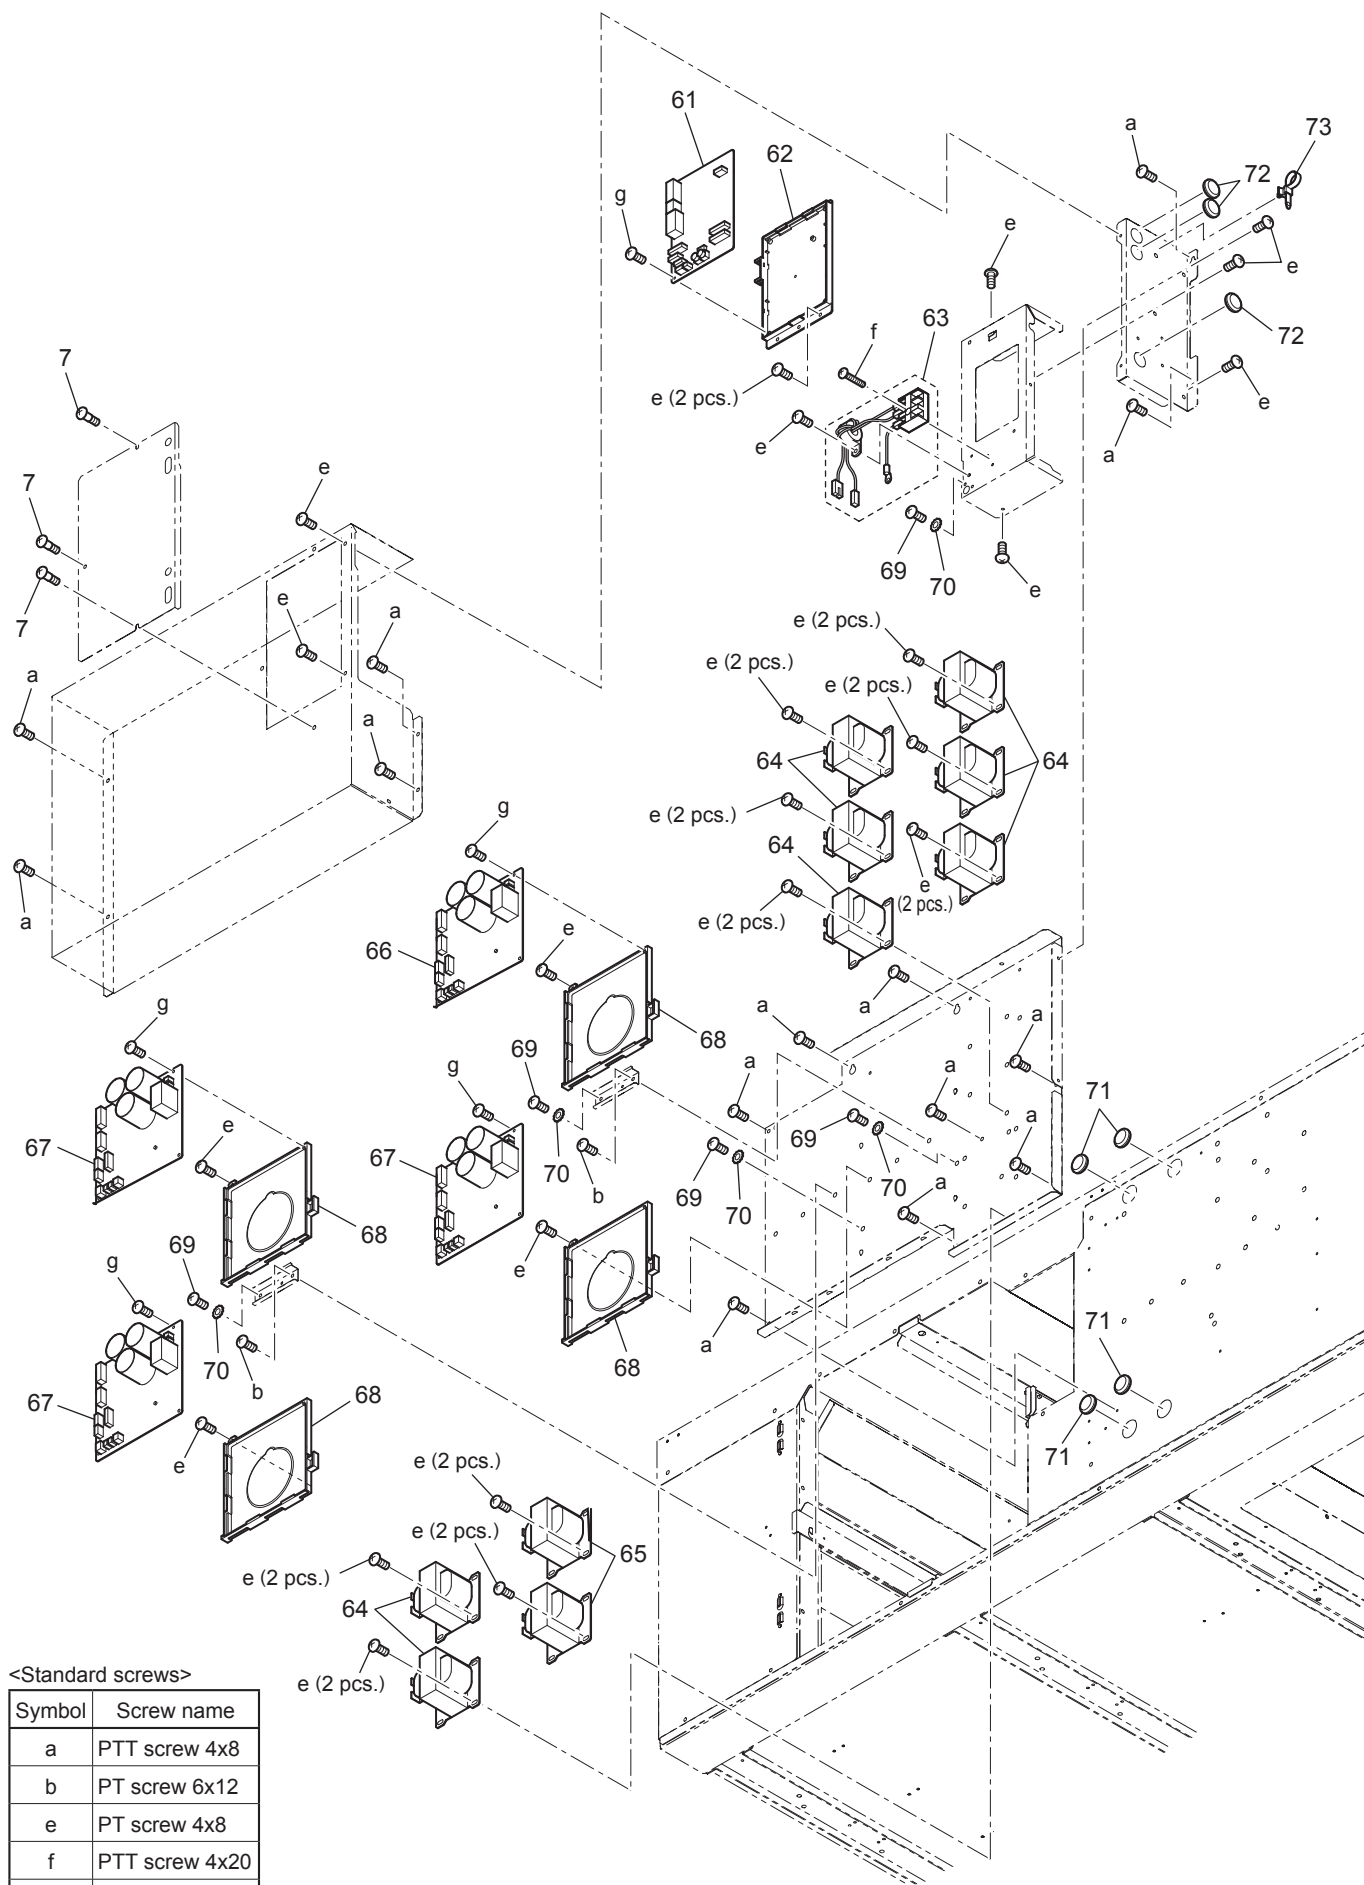


<Standard screws>

Symbol	Screw name
a	PTT screw 4x8
b	PT screw 6x12
e	PT screw 4x8
f	PTT screw 4x20
g	PTT screw 3x8

LGH-250RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
61	Circuit board	Y50 169 173	1	△	LG-X05DC-E・C With the lead wires
62	PCB fix plate	Y50 169 380	1		
63	Terminal block	Y50 175 215	1	△	
64	Reactor	Y50 172 179	8	△	
65	Reactor	Y50 172 180	2	△	
66	Circuit board	Y50 169 172	1	△	LG-X05DC-E・P LG-X05DC-E1
67	Circuit board	Y50 173 171	3	△	
68	PCB case	Y50 163 380	4		
69	PT screw 4×8 BS	H00 011 008	5		
70	Lock washer (4)	H00 013 076	5		
71	Bush	R50 476 225	4		
72	Bush	K83 223 225	3		
73	Cord band	Y55 001 223	1		

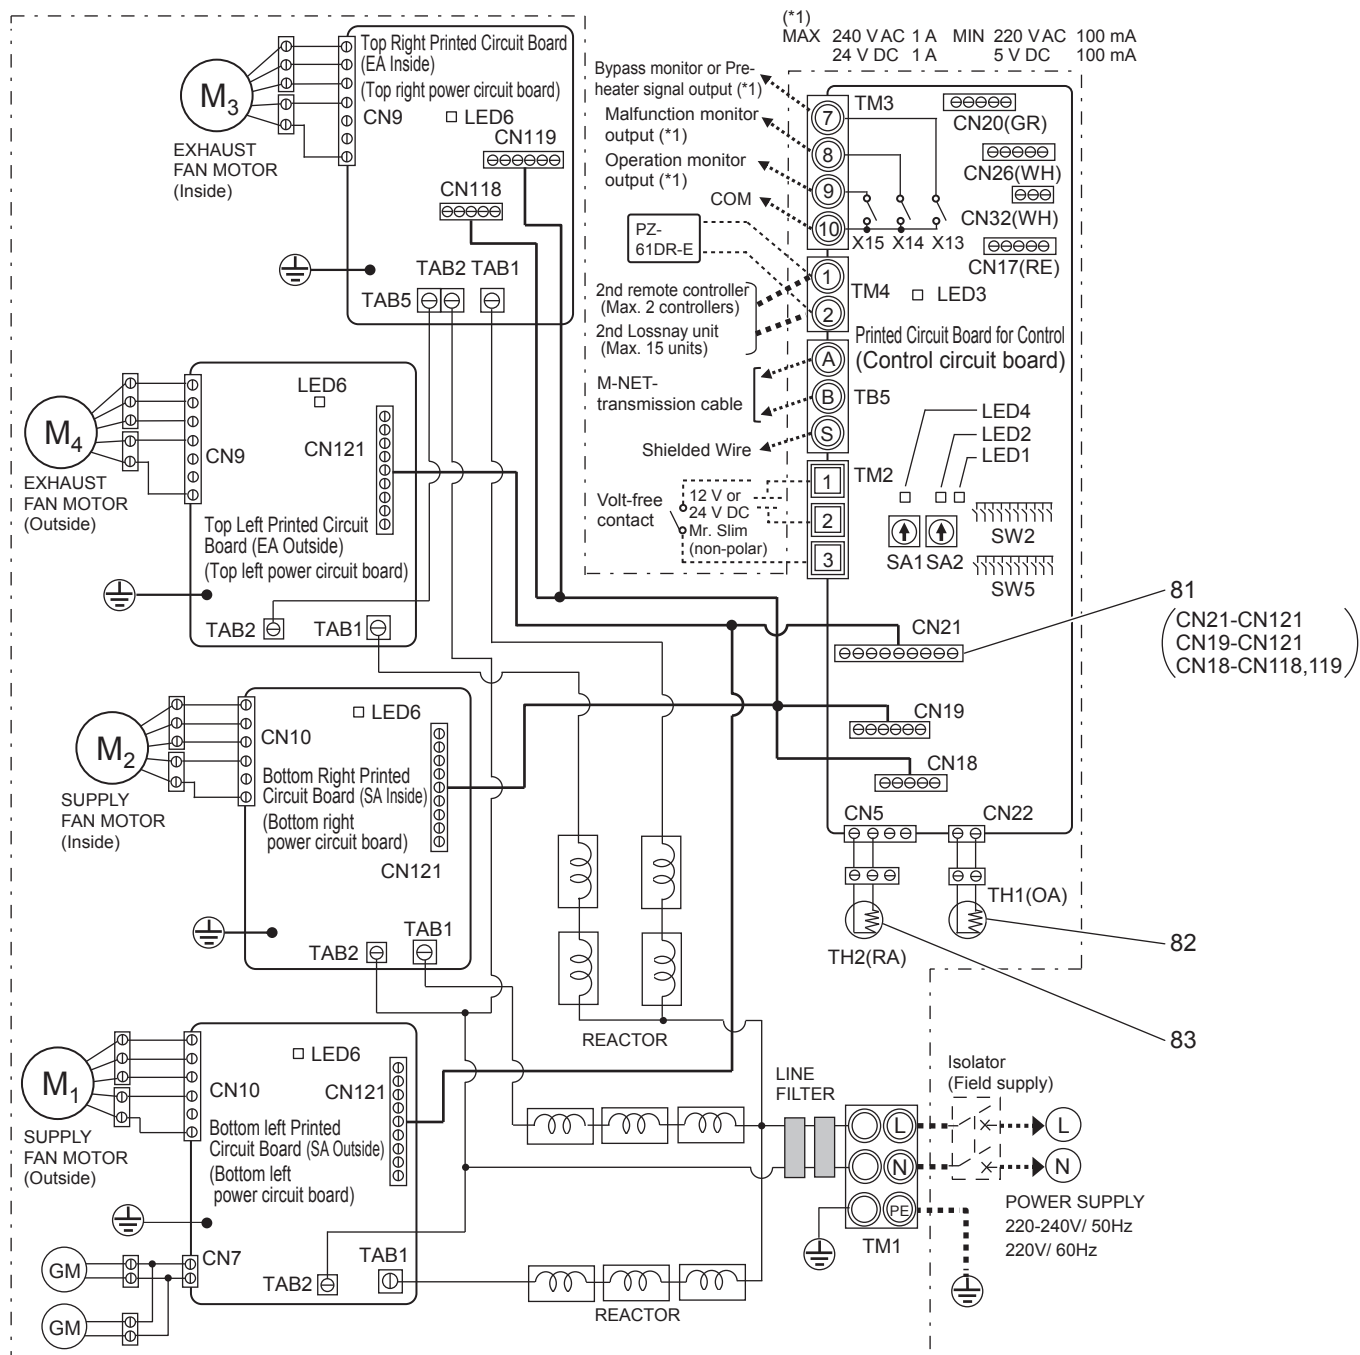

LGH-250RVXT-E

No.	Name of part	Parts No.	Q'ty pcs/unit	Critical for safety	Remarks
81	Lead wire	Y50 175 213	1	△	CN21・CN18・CN19
82	Thermistor (OA)	Y50 174 217	1	△	-30℃ to 100℃
83	Thermistor (RA)	Y50 174 223	1	△	-30℃ to 100℃