

PARTS CATALOG

Series PLA Ceiling Cassettes

R410A

Indoor unit

[Model Name]

PLA-RP35EA

PLA-RP50EA

PLA-RP60EA

PLA-RP71EA

PLA-RP100EA

PLA-RP125EA

PLA-RP140EA

[Service Ref.]

PLA-RP35EA.UK

PLA-RP50EA.UK

PLA-RP60EA.UK

PLA-RP71EA.UK

PLA-RP100EA.UK

PLA-RP125EA.UK

PLA-RP140EA.UK

Notes:

- Some descriptions have been modified in REVISED EDITION-C.

OCB626 REVISED EDITION-B is void.

Grille model

[Model Name]

PLP-6EA

PLP-6EAE

PLP-6EAL

PLP-6EAL

PLP-6EAL

PLP-6EAL

PLP-6EAL

PLP-6EAL

[Service Ref.]

PLP-6EA

PLP-6EAE

PLP-6EAL

PLP-6EAL

PLP-6EAL

PLP-6EAL

PLP-6EAL


PLP-6EAL

PLP-6EAR1

PLP-6EAER1

PLP-6EALR1

PLP-6EALER1

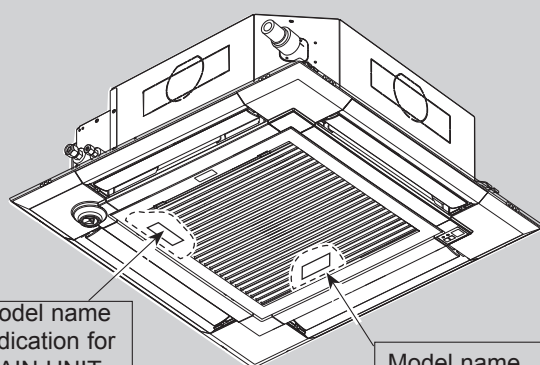


Model name
indication for
MAIN UNIT

Model name
indication for GRILLE

INDOOR UNIT



WIRELESS REMOTE
CONTROLLER
(Option)

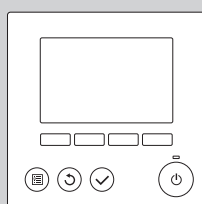

WIRED REMOTE
CONTROLLER
(Option)

CONTENTS

1. SERVICE PARTS LIST 2
2. OPTIONAL PARTS 6


SERVICE MANUAL (OCH626)


Mr. SLIM

GRILLE PARTS

[Service Ref.]


PLP-6EA	PLP-6EAR1	(Standard)
PLP-6EAL	PLP-6EALR1	(Standard with signal receiver)
PLP-6EAE	PLP-6EAER1	(Standard with i-see Sensor)
PLP-6EALE	PLP-6EALER1	(Standard with signal receiver and i-see Sensor)
PLP-6EAJ		(Elevation)
PLP-6EAJE		(Elevation with i-see Sensor)
PLP-6EALM		(Standard with signal receiver and wireless remote controller)
PLP-6EALME		(Standard with signal receiver, i-see Sensor, and wireless remote controller)

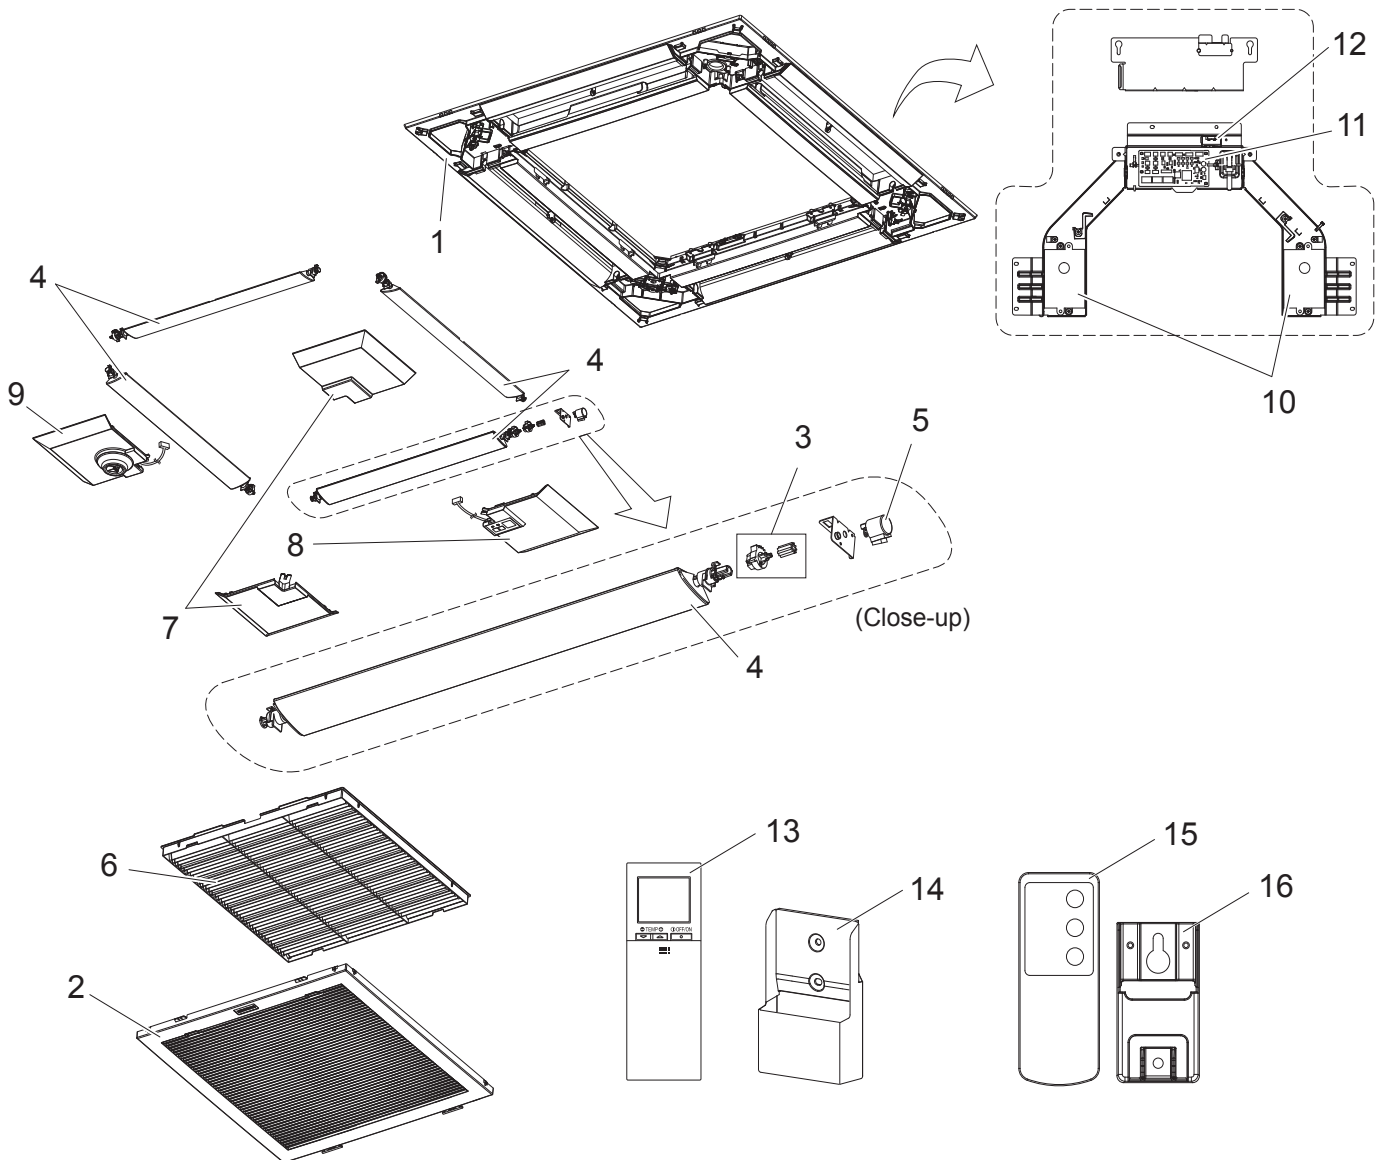




No.	Part No.	Part Name	Specification	Q'ty/unit												Wiring Diagram Symbol
				PLP-6EA	PLP-6EAR1	PLP-6EAL	PLP-6EALR1	PLP-6EAE	PLP-6EAER1	PLP-6EAE	PLP-6EALER1	PLP-6EAJ	PLP-6EAJE	PLP-6EALM	PLP-6EALME	
1	E 17 D 7 2 0 0 3	AIR OUTLET GRILLE		1		1		1		1						
	E 17 F 8 5 0 0 3	AIR OUTLET GRILLE			1		1		1		1	1	1	1	1	
2	E 17 D 7 2 0 1 0	INTAKE GRILLE		1		1		1		1						
	E 17 F 8 5 0 1 0	INTAKE GRILLE			1		1		1		1			1	1	
	E 17 F 9 1 0 1 0	INTAKE GRILLE									1	1				
3	E 17 D 7 2 0 3 1	GEAR (VANE&S/M)		4		4		4		4						
	E 17 F 8 5 0 3 1	GEAR (VANE&S/M)			4		4		4		4	4	4	4	4	
4	E 17 D 7 2 0 3 7	AUTO VANE&VANE BUSH		4		4		4		4						
	E 17 F 8 5 0 3 7	AUTO VANE&VANE BUSH			4		4		4		4	4	4	4	4	
5	E 17 1 0 3 3 0 3	VANE MOTOR		4	4	4	4	4	4	4	4	4	4	4	4	MV
6	E 17 D 7 2 1 0 0	AIR FILTER		1		1		1		1						
	E 17 F 8 5 1 0 0	AIR FILTER			1		1		1		1	1	1	1	1	
7	E 17 D 7 2 9 7 5	CORNER PANEL		4		3		3		2						
	E 17 F 8 5 9 7 5	CORNER PANEL			4		3		3		2	3	2	3	2	
8	E 17 D 7 3 9 7 5	CORNER PANEL (Signal receiver)				1				1						
	E 17 F 8 8 9 7 5	CORNER PANEL (Signal receiver)					1				1	1	1	1	1	
9	E 17 D 7 4 9 7 5	CORNER PANEL (i-see Sensor)						1		1						
	E 17 F 8 6 9 7 5	CORNER PANEL (i-see Sensor)							1		1		1		1	
10	E 17 F 9 1 4 7 1	MOTOR BOX										2	2			
11	E 17 F 9 1 4 4 7	CONTROLLER BOARD										1	1			
12	E 17 F 9 1 3 1 6	LIMIT SWITCH										1	1			
13	E 17 F 8 9 4 2 6	WIRELESS REMOTE CONTROLLER	PAR-SL100A-E											1	1	
14	E 17 D 4 4 0 8 3	HOLDER	for PAR-SL100A-E											1	1	
15	E 17 F 9 1 4 2 6	WIRELESS REMOTE CONTROLLER	for Elevation panel									1	1			
16	E 17 F 9 1 0 8 3	HOLDER	for Elevation panel									1	1			

STRUCTURAL AND FUNCTIONAL PARTS

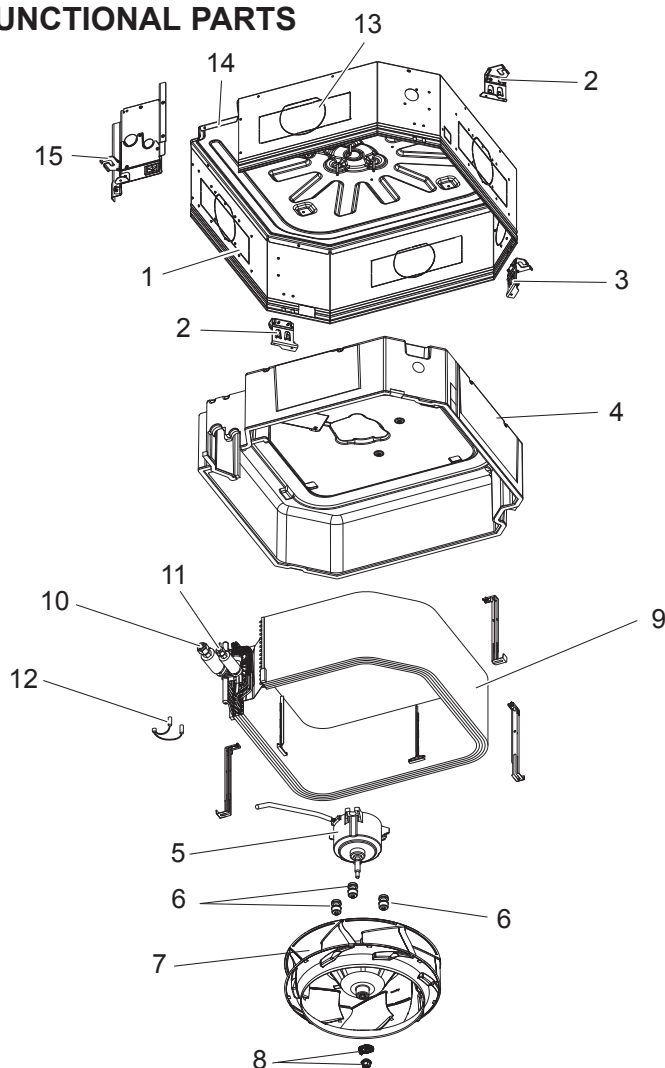

No.	Part No.	Part Name	Specification	Q'ty/unit							Wiring Diagram Symbol
				PLA-RP-EA.UK							
				35	50	60	71	100	125	140	
1	S 7 0 0 B 7 6 8 8	DRUM 2 ASSY		1	1	1	1				
	S 7 0 0 B 8 6 8 8	DRUM 2 ASSY						1	1	1	
2	S 7 0 E A 2 1 3 0	LEG PUMP		2	2	2	2	2	2	2	
3	S 7 0 E A 1 1 3 0	LEG FA		1	1	1	1	1	1	1	
4	S 7 0 0 B 4 6 5 9	INNER COVER ASSY-S		1	1	1	1				
	S 7 0 0 B 5 6 5 9	INNER COVER ASSY-L						1	1	1	
5	S 7 0 0 B 4 7 6 2	FAN MOTOR	(DC)-S	1	1	1	1				MF
	S 7 0 0 B 5 7 6 2	FAN MOTOR	(DC)-M					1	1	1	MF
6	S 7 0 0 B 1 1 0 5 H	MOTOR MOUNT		3	3	3	3	3	3	3	
7	S 7 0 0 B 4 1 1 4	TURBO FAN		1	1	1	1	1	1	1	
8	S 7 0 1 1 B 0 9 7	SPL WASHER / NUT		1	1	1	1	1	1	1	
9	S 7 0 B 1 5 4 8 0	HEAT EXCHANGER		1	1						
	S 7 0 B 1 6 4 8 0	HEAT EXCHANGER				1					
	S 7 0 B 1 7 4 8 0	HEAT EXCHANGER					1				
	S 7 0 B 1 3 4 8 0	HEAT EXCHANGER						1			
	S 7 0 B 1 4 4 8 0	HEAT EXCHANGER							1	1	
10	S 7 0 0 B 1 0 9 7	FLARE NUT	1/2"	1	1						
	S 7 0 E 1 5 0 9 7	FLARE NUT	5/8"			1	1	1	1	1	
11	S 7 0 E 1 0 0 9 7	FLARE NUT	1/4"	1	1						
	S 7 0 E 1 7 0 9 7	FLARE NUT	3/8"			1	1	1	1	1	
12	S 7 0 0 B 4 2 0 2	THERMISTOR		1	1	1	1	1	1	1	TH2/TH5
13	S 7 0 0 B 5 6 8 8	DRUM 1 ASSY		1	1	1	1				
	S 7 0 0 B 6 6 8 8	DRUM 1 ASSY						1	1	1	
14	S 7 0 0 B 2 6 8 7	BASE		1	1	1	1	1	1	1	
15	S 7 0 E A 3 1 3 0	LEG PIPE		1	1	1	1	1	1	1	

FUNCTIONAL AND ELECTRICAL PARTS

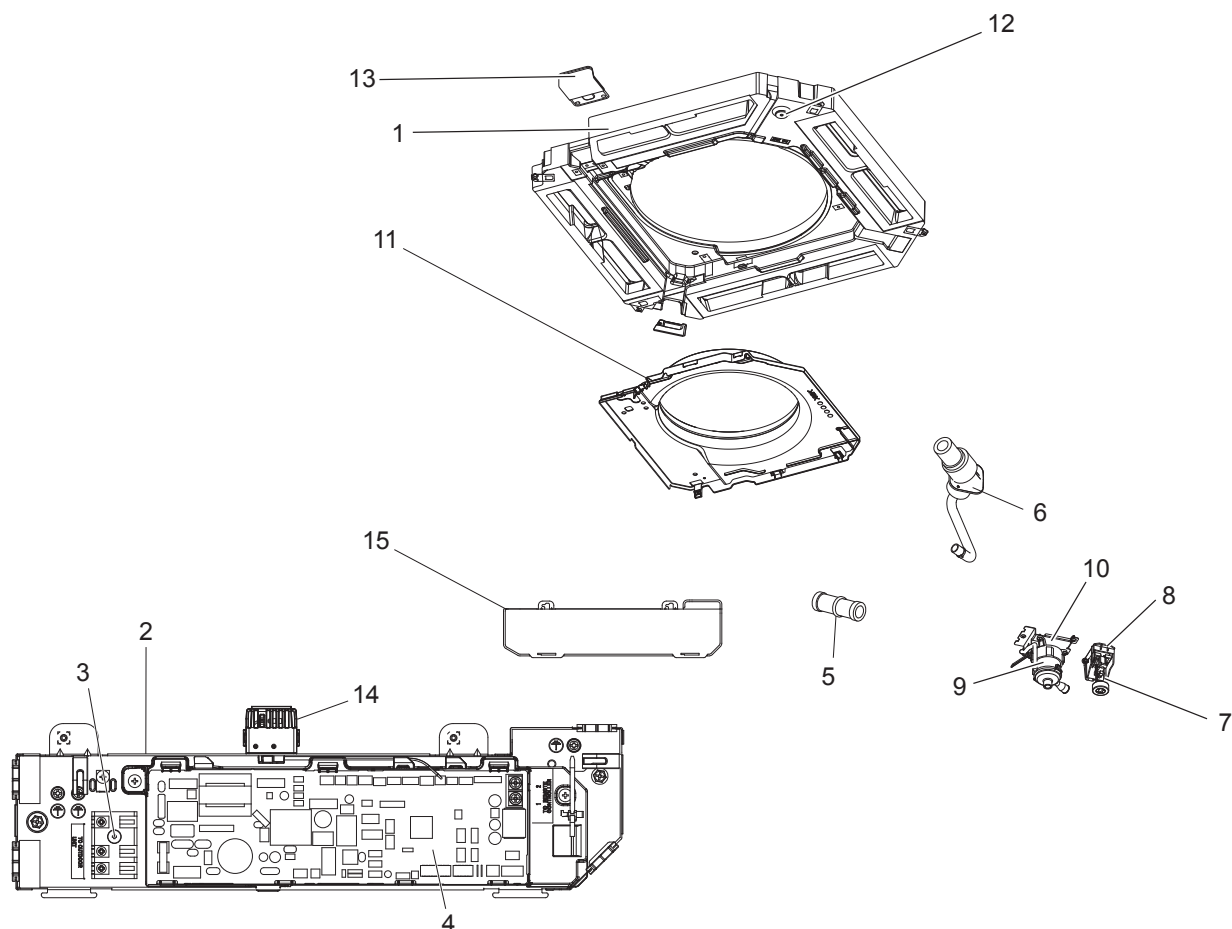

No.	Part No.	Part Name	Specification	Q'ty/unit							Remarks (Drawing No.)	Wiring Diagram Symbol
				PLA-RP-EA.UK								
				35	50	60	71	100	125	140		
1	S70 0B4 529H	DRAIN PAN		1	1	1	1	1	1	1		
2	S70 0B7 501	ELECTRICAL CONTROL BOX		1	1	1	1	1	1	1		
3	S70 K03 716	TERMINAL BLOCK	3P(S1,S2,S3)	1	1	1	1	1	1	1		TB4
4	S70 B14 310	INDOOR CONTROLLER BOARD		1	1	1	1	1	1	1		I.B
5	S70 29H 523	DRAIN SOCKET		1	1	1	1	1	1	1	Accessory	
6	S70 0B2 527H	DRAIN HOSE ASSY		1	1	1	1	1	1	1		
7	S70 0B2 266	FLOAT SWITCH		1	1	1	1	1	1	1		FS
8	S70 0B2 533	FLOAT SWITCH BASE		1	1	1	1	1	1	1		
9	S70 0B2 355	DRAIN PUMP	220-240 V	1	1	1	1	1	1	1		DP
10	S70 0B3 533	DRAIN PUMP BASE		1	1	1	1	1	1	1		
11	S70 0B3 502	BELLMOUTH-S		1	1	1	1					
	S70 0B4 502	BELLMOUTH-L						1	1	1		
12	S70 A41 524H	DRAIN PLUG		1	1	1	1	1	1	1		
13	S70 EA1 663	WIRE COVER		1	1	1	1	1	1	1		
14	S70 0B3 202	ROOM TEMP. THERMISTOR	220XAP	1	1	1	1	1	1	1		TH1
15	-	CONT COVER		1	1	1	1	1	1	1	(BK02Y559G05)	

Parts name	Parts No.
SPACE PANEL	PAC-SJ65AS-E
AIR OUTLET SHUTTER PLATE	PAC-SJ37SP-E
WIRED REMOTE CONTROLLER (MA REMOTE CONTROLLER)	PAR-32MAA
WIRED REMOTE CONTROLLER (SIMPLE MA REMOTE CONTROLLER)	PAC-YT52CRA
WIRELESS REMOTE CONTROLLER	PAR-SL100A-E
POWER SUPPLY TERMINAL KIT	PAC-SJ39HR-E
HIGH EFFICIENCY FILTER ELEMENT	PAC-SH59KF-E
MULTI-FUNCTIONAL CASEMENT	PAC-SJ41TM-E
FLANGE FOR FRESH AIR INTAKE	PAC-SH65OF-E
SYSTEM CONTROL INTERFACE	MAC-333IF
MA & CONTACT TERMINAL INTERFACE	MAC-397IF-E
REMOTE SENSOR	PAC-SE41TS-E
Wi-Fi INTERFACE	MAC-557IF-E
REMOTE ON/OFF ADAPTER	PAC-SE55RA-E
REMOTE OPERATION ADAPTER	PAC-SF40RM-E
CONNECTOR CABLE FOR REMOTE DISPLAY	PAC-SA88HA-E
GRILLE (i-see Sensor)	PLP-6EAE, PLP-6EAER1
GRILLE (i-see Sensor with signal receiver)	PLP-6EAE, PLP-6EALER1
GRILLE (i-see Sensor with receiver and wireless remote controller)	PLP-6EALME
GRILLE (Standard)	PLP-6EA, PLP-6EAR1
GRILLE (Standard with signal receiver)	PLP-6EAL, PLP-6EALR1
GRILLE (Standard with receiver and wireless remote controller)	PLP-6EALM
GRILLE (Automatic filter elevation without i-see Sensor)	PLP-6EAJ
GRILLE (Automatic filter elevation with i-see Sensor)	PLP-6EAJE
i-SEE SENSOR CORNER PANEL	PAC-SE1ME-E
SIGNAL RECEIVER CORNER PANEL	PAR-SE9FA-E

MITSUBISHI ELECTRIC CORPORATION

HEAD OFFICE: TOKYO BUILDING, 2-7-3, MARUNOUCHI, CHIYODA-KU, TOKYO 100-8310, JAPAN